

INTERFACE COMPONENTS

AXDIS-GMLN31 interface

AXDIS-GMLN31 harness

- 16-pin harness with stripped leads
- Female 3.5mm connector w/stripped leads

TOOLS REQUIRED

- Wire cutter
- Crimp tool

Small flat-blade screwdriver

Solder gun

- Tape
- Connectors (example: butt-connectors, bell caps, etc.)

APPLICATIONS (see next page)

Radio Replacement Data Interface w/SWC

Fits Select GM Models 2019–2023

Visit **AxxessInterfaces.com** for up-to-date vehicle specific applications.

INTERFACE FEATURES

- Designed for non-amplified systems
- Provides accessory power (12-volt 10-amp)
- Retains R.A.P. (Retained Accessory Power)
- Provides NAV outputs (parking brake, reverse, speed sense)
- Retains audio controls on the steering wheel
- Does NOT retain OnStar®
- Retains rearview camera
- Retains balance & fade
- · Micro "B" USB updatable

MetraOnline.com may be used to assist with dash assembly instructions. Simply enter your Year, Make, Model vehicle into the Vehicle Fit Guide and look for the Dash Kit Installation Instructions.

www.MetraOnline.con



Product Info



TABLE OF CONTENTS

| Applications | 2 |
|----------------------------------------------|-----|
| Connections | 2-3 |
| 3.5mm Jack Steering Wheel Control Retention. | 3 |
| nstalling the AXDIS-GMLN31 | 4 |
| Programming the AXDIS-GMLN31 | 4 |
| Steering Wheel Control Settings (SWC) | 5-7 |
| LED Feedback | 5 |
| Changing Radio Type | 6 |
| Remapping the SWC | 6-7 |
| Dual Assignment Instructions | 7-8 |
| roubleshooting | 8 |
| | |

ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition

NOTE: Refer also to the instructions included with the aftermarket radio.

to test this product.

APPLICATIONS

Chevrolet

| 2019-2023 |
|-----------|
| 2019-2021 |
| 2019-2022 |
| 2019-2019 |
| 2019-2023 |
| 2019-2022 |
| 2019-2021 |
| 2019-2022 |
| 2019-2022 |
| 2021-2022 |
| 2017-2020 |
| |
| 2020-2022 |
| 2019-2022 |
| 2019-2021 |
| 2019-2022 |
| |

†For extension, use AXEXH-GM31

CONNECTIONS

From the 16-pin harness with stripped leads to the aftermarket radio:

- Connect the **Red** wire to the accessory wire.
- If the aftermarket radio has an illumination wire, connect the **Orange/White** wire to it.
- Connect the **Gray** wire to the right front positive speaker output.
- Connect the **Gray/Black** wire to the right front negative speaker output.
- Connect the **White** wire to the left front positive speaker output.
- Connect the **White/Black** wire to the left front negative speaker output.

The following (3) wires are only for multimedia/navigation radios that require these wires.

- Connect the **Blue/Pink** wire to the VSS/speed sense wire.
- · Connect the Green/Purple wire to the reverse wire.
- Connect the **Light Green** wire to the parking brake wire
- Tape off and disregard the following (5) wires, they will not be used in this application: **Blue/White**, **Green**, **Green/Black**, **Purple** and **Purple/Black**.

CONNECTIONS (CONT)

From the AXDIS-GMLN31 harness to the aftermarket radio:

- Connect the **Black** wire to the ground wire.
- Connect the Yellow wire to the battery wire.
- Connect the **Green** wire to the left rear positive speaker output.
- Connect the **Green/Black** wire to the left rear negative speaker output.
- Connect the **Purple** wire to the right rear positive speaker output.
- Connect the **Purple/Black** wire to the right rear negative speaker output.
- Connect the Yellow RCA jack into the aftermarket radio's 'Rear Camera' input.

Note: The relay attached to the harness is only for audible turn signal clicks. No extra steps are required to retain this feature, so leave the relay as-is.

Continue to 3.5mm jack steering wheel control retention

3.5mm Jack Steering Wheel Control Retention:

The 3.5mm jack is to be used to retain audio controls on the steering wheel.

For the radios listed below, connect the included *female 3.5mm connector with stripped leads*, to the male 3.5mm SWC jack from the **AXDIS-GMLN31 harness**. Any remaining wires tape off and disregard.

- Eclipse: Connect the steering wheel control wire, normally Brown, to the Brown/White wire of the connector. Connect the remaining steering wheel control wire, normally Brown/White, to the Brown wire of the connector.
- Metra OE: Connect the steering wheel control Key 1 wire (Gray) to the Brown wire.
- Kenwood or select JVC with a steering wheel control wire: Connect the Blue/Yellow wire to the Brown wire.

Note: If your Kenwood radio auto detects as a JVC, manually set the radio type to Kenwood. See the instructions under changing radio type.

- XITE: Connect the steering wheel control SWC-2 wire from the radio to the **Brown** wire.
- Parrot Asteroid Smart or Tablet: Connect the 3.5mm jack into the AXSWCH-PAR (sold separately), and then connect the 4-pin connector from the AXSWCH-PAR into the radio.

Note: The radio must be updated to rev. 2.1.4 or higher software.

Universal "2 or 3 wire" radio: Connect the steering wheel control wire, referred to as Key-A or SWC-1, to the Brown wire of the connector. Then connect the remaining steering wheel control wire, referred to as Key-B or SWC-2, to the Brown/White wire of the connector. If the radio comes with a third wire for ground, disregard this wire.

Note: After the interface has been programmed to the vehicle, refer to the manual provided with the radio for assigning the SWC buttons. Contact the radio manufacturer for more information.

For all other radios: Connect the 3.5mm jack from the **AXDIS-GMLN31 harness** into the jack on the aftermarket radio designated for an external steering wheel control interface. Please refer to the aftermarket radios manual if in doubt as to where the 3.5mm jack goes to.

INSTALLING THE AXDIS-GMLN31

With the Key in the Off Position:

 Connect the 16-pin harness with stripped leads, and the AXDIS-GMLN31 harness, into the interface.

Attention! Do not connect the **AXDIS-GMLN31 harness** to the wiring harness in the vehicle just yet.

Attention! If retaining steering wheel controls, ensure that the jack/wire is connected to the radio before proceeding. If this step is skipped, the interface will need to be reset for the steering wheel controls to function.

PROGRAMMING THE AXDIS-GMLN31

For the steps below, the LED located inside the interface can only be seen while active. The interface does not need to be opened to see the LED

- 1. Start the vehicle.
- 2. Connect the **AXDIS-GMLN31 harness** to the wiring harness in the vehicle.
- **3.** The LED will initially turn on solid **Green**, then turn off for a few second while detecting the radio.
- 4. The LED will then flash Red & Green in different patterns (see chart) indicating which radio is connected to the interface, and then turn off for a couple of seconds. Pay close attention to the RED & Green LED pattern. This will help in troubleshooting, if need be. Refer to the LED Feedback section for more information.
- After a couple seconds the LED will turn on solid **Red** while the interface auto detects the vehicle. The radio will shut off at this point. The process should take 5 to 30 seconds.
- Once the vehicle has been auto detected by the interface, the LED will turn on solid Green, then the radio will come back on, indicating that programming was successful.
- Test all functions of the installation for proper operation, before reassembling the dash. If the interface fails to function, refer to the **Troubleshooting** section.

Note: The LED will turn on solid **Green** for a moment, then turn off under normal operation after the key has been cycled.

STEERING WHEEL CONTROL SETTINGS: LED FEEDBACK

| RADIO | | LED PATTERN | |
|-------------------------|-----|--------------|--|
| Pioneer/Jensen | G | <u> </u> | |
| JVC | R | <u> </u> | |
| KENWOOD | GG | * | |
| SONY/DUAL | GR | <u> </u> | |
| Reserved for future use | RG | <u> </u> | |
| ALPINE | RR | * * | |
| ALPINE (type 2) | GGG | | |
| AXXERA | GGR | * * * | |
| AXXERA (type 2) | GRG | XXX | |
| MAGNADYNE | GRR | XXX | |

- 1) If the LED pattern shows **JVC**, but a **JVC** radio isn't installed, change the radio type to Kenwood. Refer to the **Changing Radio Type** document.
- **2)** If the LED pattern shows **Alpine**, but an **Alpine** radio isn't installed, make sure the 3.5mm jack is plugged into the radio.
- **3)** If no SWC, change the radio type to the opposite radio type. Refer to the **Changing Radio Type** document.

| RADIO | | LED PATTERN | |
|-------------------------|------|----------------|--|
| BOSS | RGG | | |
| Reserved for future use | RGR | * * * | |
| CLARION (type 1) | RRG | | |
| CLARION (type 2) | RRR | | |
| Reserved for future use | GGGG | | |
| Reserved for future use | GGGR | | |
| Reserved for future use | GGRG | | |
| Reserved for future use | GGRR | | |
| Reserved for future use | GRGG | | |
| Reserved for future use | GRGR | | |
| Resistive Radio #1 | GRRG | | |
| Resistive Radio #2 | GRRR | | |
| Resistive Radio #3 | RGGG | | |
| Resistive Radio #4 | RGGR | | |
| Resistive Radio #5 | RGRG | | |
| Resistive Radio #6 | RGRR | * * * * | |

STEERING WHEEL CONTROL SETTINGS: CHANGING RADIO TYPE & REMAPPING

Attention! The Axxess Updater App can also be used to program the following (3) sub-sections as well, pending that the interface has been programmed.

Changing Radio Type

If the LED flashes do not match the radio you have connected, you must manually program the **AXDIS-GMLN31** to tell it what radio it is connected to.

- After (3) seconds of turning the key on, press and hold the Volume-Down button on the steering wheel until the LED in the AXDIS-GMLN31 goes solid.
- Release the Volume-Down button; the LED will go out indicating the interface is in Changing Radio Type mode.
- Refer to the Radio Legend to know which radio number you would like to have programmed.
- Press and hold the Volume-Up button until the LED goes solid, and then release. Repeat this step for the desired radio number you have selected.
- **5.** Once the desired radio number has been selected, press and hold the Volume-Down button on the steering wheel until the LED goes solid. The LED will remain on for about (3) seconds while it stores the new radio information.
- Once the LED goes out, the Changing Radio Type mode will then end. You can now test the steering control wheel controls.

Note: If at any time the user fails to press any button for a period longer than (10) seconds, this process will abort.

| | Flash Count Radio Legend | | |
|-------------------|--------------------------|-----------------------|--|
| 1 PIONEER/JENSEN | 10 MAGNADYNE | 19 Reserved | |
| 2 JVC | 11 BOSS | 20 Reserved | |
| 3 KENWOOD | 12 Reserved | 21 Resistive Radio #1 | |
| 4 SONY/DUAL | 13 CLARION (type 1) | 22 Resistive Radio #2 | |
| 5 Reserved | 14 CLARION (type 2) | 23 Resistive Radio #3 | |
| 6 ALPINE | 15 Reserved | 24 Resistive Radio #4 | |
| 7 ALPINE (type 2) | 16 Reserved | 25 Resistive Radio #5 | |
| 8 AXXERA | 17 Reserved | 26 Resistive Radio #6 | |
| 9 AXXERA (type 2) | 18 Reserved | | |

Remapping

Once the **AXDIS-GMLN31** has been programmed, the button assignment for the steering wheel controls may be reassigned if so desired. For example, if the Seek-Up button is preferred to be the Mute button instead. Follow the steps below to remap the steering wheel control buttons.

1. Ensure the **AXDIS-GMLN31** is visible so you can see the LED flashes to confirm button recognition.

Tip: Turning the radio off is recommended.

- Within the first twenty seconds of turning the ignition on, press and hold the Volume-Up button on the steering wheel until the LED goes solid.
- Release the Volume-Up button, the LED will then go out; The Volume-Up button has now been programmed.

Continued on the next page



STEERING WHEEL CONTROL SETTINGS: DUAL ASSIGNMENT

Follow the list in the Button Assignment Legend to reference the order in which the steering wheel control buttons need to be programmed.

Note: If the next function on the list is not on the steering wheel, press the Volume-Up button for (1) second until the LED comes on to skip that function, and then release the Volume-Up button. This will tell the **AXDIS-GMLN31** that this function is not available, and it will move on to the next function.

To complete the remapping process, press and hold the Volume-Up button until the LED in the AXDIS-GMLN31 goes out.

Button Assignment Legend

| Function # | Function | Function # | Function |
|------------|----------------|------------|--------------------|
| 1 | Volume-Up | 10 | Band |
| 2 | Volume-Down | 11 | Play/Enter |
| 3 | Seek-Up/Next | 12 | PTT (Push to Talk) |
| 4 | Seek-Down/Prev | 13 | On-Hook |
| 5 | Source/Mode | 14 | Off-Hook |
| 6 | Mute | 15 | Fan-Up * |
| 7 | Preset-Up | 16 | Fan-Down * |
| 8 | Preset-Down | 17 | Temp-Up * |
| 9 | Power | 18 | Temp-Down * |

^{*} Not applicable in this application

Note: Some radios may not have these commands. Please refer to the manual provided with the radio, or contact the radio Manufacturer for specific commands recognized by that particular radio.

Dual Assignment Instructions (Long Button Press)

The **AXDIS-GMLN31** has the capability to assign (2) functions to a single button, except Volume-Up and Volume-Down. Follow the steps below to program the button(s) to your liking.

Note: Seek-Up and Seek-Down come pre-programmed as Preset-Up and Preset-Down for a long button press.

- **1.** Turn on the ignition but do not start the vehicle.
- 2. Press and hold down the steering wheel control button that you want to assign a long press function to for about (10) seconds, or until the LED flashes rapidly. At this point release the button; the LED will then go solid.

Dual Assignment Legend

| Function # | Function | Function # | Function |
|------------|----------------|------------|-------------|
| 1 | Not allowed | 10 | Band |
| 2 | Not allowed | 11 | Play/Enter |
| 3 | Seek-Up/Next | 12 | PTT |
| 4 | Seek-Down/Prev | 13 | On-Hook |
| 5 | Mode/Source | 14 | Off-Hook |
| 6 | ATT/Mute | 15 | Fan-Up * |
| 7 | Preset-Up | 16 | Fan-Down * |
| 8 | Preset-Down | 17 | Temp-Up * |
| 9 | Power | 18 | Temp-Down * |

^{*} Not applicable in this application







DUAL ASSIGNMENT INSTRUCTIONS (CONT)

3. Press and release the Volume-Up button the number of times corresponding to the new button number selected. Refer to the Dual Assignment Legend. The LED will flash rapidly while the Volume-Up button is being pressed, and then go back to a solid LED once released. Go to the next step once the Volume-Up button has been pressed the desired number of times.

Caution: If more than (10) seconds elapses between pressing the **Volume-Up** button, this procedure will abort, and the LED will go out.

4. To store the long press button in memory, press the button that you assigned a long press button to (the button held down in Step 2). The LED will now go off indicating the new information has been stored.

Note: These steps must be repeated for each button you would like to assign a dual purpose feature to. To reset a button back to its default state, repeat Step 1, and then press the **Volume-Down** button. The LED will go out, and the long press mapping for that button will be erased.

TROUBLESHOOTING

Resetting the AXDIS-GMLN31

- 1. The **Blue** reset button is located inside the interface, between the two connectors. The button is accessible outside the interface, no need to open the interface.
- **2.** Press and hold the reset button for two seconds, and then let go to reset the interface.
- **3.** Refer to "Programming the Interface" from this point.

Having difficulties? We're here to help.



Contact our Tech Support line at: **386–257–1187**



Or via email at: techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM Saturday: 10:00 AM - 5:00 PM Sunday: 10:00 AM - 4:00 PM



Metra recommends MECP certified technicians