



AXDIS-GMLN11

INSTALLATION INSTRUCTIONS



INTERFACE COMPONENTS

- AXDIS-GMLN11 interface
- 16-pin harness with stripped leads
- AXDIS-GMLN11 harness
- 4-pin to 4-pin resistor pad harness
- Female 3.5mm connector with stripped leads

APPLICATIONS

CHEVROLET

Cobalt.....2007-2012
HHR.....2006-2012
Malibu.....2008-2012

PONTIAC

G5.....2007-2009
G6.....2009-2010
Solstice.....2006-2009

SATURN

Aura/ Sky.....2007-2009

TOOLS & INSTALLATION ACCESSORIES REQUIRED

- Wire cutter • Crimp tool
- Solder gun
- Tape
- Small flat-blade screwdriver
- Connectors (example: butt-connectors, bell caps, etc.)

Radio Replacement Data Interface with SWC

Fits Select GM Models 2006-2012

INTERFACE FEATURES

- Designed for non-amplified or amplified systems
- Provides accessory power (12-volt 10-amp)
- Retains R.A.P. (Retained Accessory Power)
- Provides NAV outputs (parking brake, reverse, speed sense)
- Retains audio controls on the steering wheel
- Retains OnStar® with adjustable volume if equipped
- Retains OEM Bluetooth® connectivity and satellite radio if equipped
- Retains chimes
- Retains balance & fade
- High level speaker input
- Micro “B” USB updatable

For **Dash Disassembly Instructions**, refer to metraonline.com. Enter the year, make, and model of the vehicle in the **Vehicle Fit Guide** for **Radio Install kits**.

www.MetraOnline.com



Product Info



TABLE OF CONTENTS

Connections to Be Made.....	2-4
For Models without an Amplifier.....	2
For Models with an Analog Amplifier	3
3.5mm Jack Steering Wheel Control Retention ...	4
Installing the AXDIS-GMLN11	4
Programming The AXDIS-GMLN11.....	5
Adjusting The AXDIS-GMLN11	6
Steering Wheel Control Settings (SWC).....	7-10
LED Feedback	7
Changing Radio Type.....	8
Remapping the SWC Buttons	9
Dual Assignment Instructions	10
Troubleshooting.....	11

Visit AxxessInterfaces.com for up-to-date vehicle specific applications.

ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product.

NOTE: Refer also to the instructions included with the aftermarket radio.

CONNECTIONS TO BE MADE

Attention! This interface will work with models that are either factory amplified, or non-amplified. Please follow the instructions carefully for your model vehicle. Failure to do so will result in either no sound, or low sound. If you are unsure if your vehicle is factory amplified or not, please contact your local dealership.

For Models without an Amplifier:

From the 16-pin harness with stripped leads to the aftermarket radio:

- Connect the **Red** wire to the accessory wire.
- Connect the **Blue/White** wire to the amp turn on wire. This wire must be connected for the audio controls on the steering wheel to function.
- If the aftermarket radio has an illumination wire, connect the **Orange/White** wire to it.
- If the aftermarket radio has a mute wire, connect the **Brown** wire to it. If the mute wire is not connected, the radio will turn off when OnStar® is activated.
- Connect the **Gray** wire to the right front positive speaker output.
- Connect the **Gray/Black** wire to the right front negative speaker output.
- Connect the **White** wire to the left front positive speaker output.
- Connect the **White/Black** wire to the left front negative speaker output.

The following (3) wires are only for multimedia/navigation radios that require these wires.

- Connect the **Blue/Pink** wire to the VSS/speed sense wire.
- Connect the **Green/Purple** wire to the reverse wire.
- Connect the **Light Green** wire to the parking brake wire
- Tape off and disregard the following (4) wires, they will not be used in this application: **Green, Green/Black, Purple, Purple/Black.**

From the AXDIS-GMLN11 Harness to the Aftermarket Radio:

- Connect the **Black** wire to the ground wire.
- Connect the **Yellow** wire to the battery wire.
- Cut off the resistors from the **Green, Green/Black, Purple, and Purple/Black** wires below the heat shrink.
- Connect the **Green** wire to the left rear positive speaker output.
- Connect the **Green/Black** wire to the left rear negative speaker output.
- Connect the **Purple** wire to the right rear positive speaker output.
- Connect the **Purple/Black** wire to the right rear negative speaker output.
- Ensure the (2) 4-pin Molex connectors are connected together.

Note: The 4-pin to 4-pin resistor pad harness will not be used in this application.

- The **Black/Yellow** wire is used for OnStar® level adjustment for models that do not come equipped with steering wheel controls. Refer to the OnStar® level Adjustment section for further instructions.
- Connect the **Red** and **White** RCA jacks to the audio **AUX-IN** jacks of the aftermarket radio.
- Disregard the DIN jack and **Red** wire.

Continue to 3.5mm Jack Steering Wheel Control Retention

CONNECTIONS TO BE MADE (CONT)

Attention! This interface will work with models that are either factory amplified, or non-amplified. Please follow the instructions carefully for your model vehicle. Failure to do so will result in either no sound, or low sound. If you are unsure if your vehicle is factory amplified or not, please contact your local dealership.

For Models with an Analog Amplifier:

From the 16-pin harness with stripped leads to the aftermarket radio:

- Connect the **Red** wire to the accessory wire.
- Connect the **Blue/White** wire to the amp turn on wire. This wire must be connected to hear sound from the factory amplifier, and also for the audio controls on the steering wheel to function.
- If the aftermarket radio has an illumination wire, connect the **Orange/White** wire to it.
- If the aftermarket radio has a mute wire, connect the **Brown** wire to it. If the mute wire is not connected, the radio will turn off when OnStar® is activated.
- Connect the **Gray** wire to the right front positive speaker output.
- Connect the **Gray/Black** wire to the right front negative speaker output.
- Connect the **White** wire to the left front positive speaker output.
- Connect the **White/Black** wire to the left front negative speaker output.

The following (3) wires are only for multimedia/navigation radios that require these wires.

- Connect the **Blue/Pink** wire to the VSS/speed sense wire.
- Connect the **Green/Purple** wire to the reverse wire.
- Connect the **Light Green** wire to the parking brake wire
- Tape off and disregard the following (4) wires, they will not be used in this application: **Green, Green/Black, Purple, Purple/Black**

From the AXDIS-GMLN11 Harness to the Aftermarket Radio:

- Connect the **Black** wire to the ground wire.
- Connect the **Yellow** wire to the battery wire.
- Connect the **Green** wire to the left rear positive speaker output.
- Connect the **Green/Black** wire to the left rear negative speaker output.
- Connect the **Purple** wire to the right rear positive speaker output.
- Connect the **Purple/Black** wire to the right rear negative speaker output.
- Disconnect the (2) 4-pin Molex connectors, and then attach the 4-pin to 4-pin resistor pad harness.
- The **Black/Yellow** wire is used for OnStar® level adjustment for models that do not come equipped with steering wheel controls. Refer to the OnStar® level Adjustment section for further instructions.
- Connect the **Red** and **White** RCA jacks to the audio AUX-IN jacks of the aftermarket radio.
- Disregard the DIN jack and **Red** wire.

Continue to 3.5mm jack steering wheel control retention

3.5mm Jack Steering Wheel Control Retention:

- The 3.5mm jack is to be used to retain audio controls on the steering wheel.
- For the radios listed below, connect the included female 3.5mm connector with stripped leads onto the male 3.5mm SWC jack from the **AXDIS-GMLN11**. Any remaining wires tape off and disregard.
 - **Eclipse:** Connect the steering wheel control wire, normally **Brown**, to the **Brown/White** wire of the connector. Then connect the remaining steering wheel control wire, normally **Brown/White**, to the **Brown** wire of the connector.
 - **Metra OE:** Connect the steering wheel control Key 1 wire (**Gray**) to the **Brown** wire.
 - **Kenwood or select JVC with a steering wheel control wire:** Connect the **Blue/Yellow** wire to the **Brown** wire.
Note: If your Kenwood radio auto detects as a JVC, manually set the radio type to Kenwood. See the instructions under changing radio type.
 - **XITE:** Connect the steering wheel control SWC-2 wire from the radio to the **Brown** wire.
 - **Parrot Asteroid Smart or Tablet:** Connect the 3.5mm jack into the AXSWCH-PAR (sold separately), and then connect the 4-pin connector from the AXSWCH-PAR into the radio.
Note: The radio must be updated to rev. 2.1.4 or higher software.
 - **Universal “2 or 3 wire” radio:** Connect the steering wheel control wire, referred to as Key-A or SWC-1, to the **Brown** wire of the connector. Then connect the remaining steering wheel control wire, referred to as Key-B or SWC-2, to the **Brown/White** wire of the connector. If the radio comes with a third wire for ground, disregard this wire.
Note: After the interface has been programmed to the vehicle, refer to the manual provided with the radio for assigning the SWC buttons. Contact the radio manufacturer for more information.
- **For all other radios:** Connect the 3.5mm jack from the **AXDIS-GMLN11** harness into the jack on the aftermarket radio designated for an external steering wheel control interface. Please refer to the aftermarket radios manual if in doubt as to where the 3.5mm jack goes to.

With the key in the off position:

- Connect the 16-pin harness with stripped leads, and the **AXDIS-GMLN11** harness, into the interface.

Attention! Do not connect the **AXDIS-GMLN11** harness to the wiring harness in the vehicle just yet.

Attention! If retaining steering wheel controls, ensure that the jack/wire is connected to the radio before proceeding. If this step is skipped, the interface will need to be reset for the steering wheel controls to function.

PROGRAMMING THE AXDIS-GMLN11 INTERFACE

For the steps below, the LED located inside the interface can only be seen while active. The interface does not need to be opened to see the LED.

1. Start the vehicle.
2. Connect the **AXDIS-GMLN11 harness** to the wiring harness in the vehicle.
3. The LED will initially turn on solid **Green**, then turn off for a few second while detecting the radio.
4. The LED will then flash **Red & Green** in different patterns (see chart, pg 7) indicating which radio is connected to the interface, and then turn off for a couple of seconds. Pay close attention to the **RED & Green** LED pattern. This will help in troubleshooting, if need be. Refer to the **LED Feedback** section for more information.
5. After a couple seconds the LED will turn on solid **Red** while the interface auto detects the vehicle. The radio will shut off at this point. This process should take 5 to 30 seconds.
6. Once the vehicle has been auto detected by the interface, the LED will turn on solid **Green**, and the radio will come back on, indicating programming was successful.
7. Immediately after the radio comes back on, the following buttons on the steering wheel must be pressed in the exact sequence as shown. For each button press, the LED will turn on momentarily. If a button is not present, press **Volume-Up** to skip that button.
 - Volume-Up
 - Seek Up
 - Volume-Up
 - PTT (OnStar®) or MUTE
 - Volume-Up

8. The LED will turn on after the last **Volume-Up** button has been pressed, indicating programming has ended.
9. Test all functions of the installation for proper operation, before reassembling the dash.
10. If the interface fails to function, refer to Resetting the **AXDIS-GMLN11**, then resume from step 7.

Notes:























- PTT (OnStar®) when pressed will Mute/Attenuate the radio.
- PTT (OnStar®) when pressed and held for 2 seconds will activate OnStar®, if applicable.
- The LED will turn on solid **Green** for a moment, and then turn off under normal operation after the key has been cycled.

ADJUSTING THE AXDIS-GMLN11





























































OnStar® Level Adjustment

- Press the OnStar® button to activate it.
- While OnStar® is speaking, press the **VOLUME-UP** or **VOLUME-DOWN** button on the steering wheel to raise or lower the OnStar® level.
- If the vehicle does not come equipped with steering wheel controls, locate the **Black/Yellow** wire on the **AXDIS-GMLN11** harness.
- While OnStar® is speaking, tap the **Black/Yellow** wire to ground. Once the OnStar® level is set, it will stay at that level until the **Black/Yellow** wire is tapped to ground again.

STEERING WHEEL CONTROL SETTINGS: LED FEEDBACK

RADIO		LED PATTERN
Pioneer/Jensen	G	
JVC	R	
KENWOOD	GG	 
SONY/DUAL	GR	 
Reserved for future use	RG	 
ALPINE	RR	 
ALPINE (type 2)	GGG	  
AXXERA	GGR	  
AXXERA (type 2)	GRG	  
MAGNADYNE	GRR	  

- 1) If the LED pattern shows **JVC**, but a **JVC** radio isn't installed, change the radio type to Kenwood. Refer to the **Changing Radio Type** document.
- 2) If the LED pattern shows **Alpine**, but an **Alpine** radio isn't installed, make sure the 3.5mm jack is plugged into the radio.
- 3) If no SWC, change the radio type to the opposite radio type. Refer to the **Changing Radio Type** document.

RADIO		LED PATTERN
BOSS	RGG	  
Reserved for future use	RGR	  
CLARION (type 1)	RRG	  
CLARION (type 2)	RRR	  
Reserved for future use	GGGG	   
Reserved for future use	GGGR	   
Reserved for future use	GGRG	   
Reserved for future use	GGRR	   
Reserved for future use	GRGG	   
Reserved for future use	GRGR	   
Resistive Radio #1	GRRG	   
Resistive Radio #2	GRRR	   
Resistive Radio #3	RGGG	   
Resistive Radio #4	RGGR	   
Resistive Radio #5	RGRG	   
Resistive Radio #6	RGRR	   

STEERING WHEEL CONTROL SETTINGS: CHANGING RADIO TYPE

Attention! The Axxess Updater App can also be used to program the following (3) sub-sections as well, pending that the interface has been programmed.

Changing Radio Type

If the LED flashes do not match the radio you have connected, you must manually program the **AXDIS-GMLN11** to tell it what radio it is connected to.

1. After (3) seconds of turning the key on, press and hold the **Volume-Down** button on the steering wheel until the LED in the **AXDIS-GMLN11** goes solid.
2. Release the **Volume-Down** button; the LED will go out indicating the interface is in **Changing Radio Type** mode.
3. Refer to the **Flash Count Radio Legend** to know which radio number you would like to have programmed.
4. Press and hold the **Volume-Up** button until the LED goes solid, and then release. Repeat this step for the desired radio number you have selected.
5. Once the desired radio number has been selected, press and hold the **Volume-Down** button on the steering wheel until the LED goes solid. The LED will remain on for about (3) seconds while it stores the new radio information.
6. Once the LED goes out, the **Changing Radio Type** mode will then end. You can now test the steering control wheel controls.

Note: If at any time the user fails to press any button for a period longer than (10) seconds, this process will abort.

Flash Count Radio Legend

1 PIONEER/JENSEN	10 MAGNADYNE	19 Reserved
2 JVC	11 BOSS	20 Reserved
3 KENWOOD	12 Reserved	21 Resistive Radio #1
4 SONY/DUAL	13 CLARION (type 1)	22 Resistive Radio #2
5 Reserved	14 CLARION (type 2)	23 Resistive Radio #3
6 ALPINE	15 Reserved	24 Resistive Radio #4
7 ALPINE (type 2)	16 Reserved	25 Resistive Radio #5
8 AXXERA	17 Reserved	26 Resistive Radio #6
9 AXXERA (type 2)	18 Reserved	

STEERING WHEEL CONTROL SETTINGS: REMAPPING

Remapping

Once the **AXDIS-GMLN11** has been programmed, the button assignment for the steering wheel controls may be reassigned if so desired. For example, if the **Seek-Up** button is preferred to be the **Mute** button instead. Follow the steps below to remap the steering wheel control buttons.

1. Ensure the **AXDIS-GMLN11** is visible so you can see the LED flashes to confirm button recognition.
Tip: Turning the radio off is recommended.
2. Within the first twenty seconds of turning the ignition on, press and hold the **Volume-Up** button on the steering wheel until the LED goes solid.
3. Release the **Volume-Up** button, the LED will then go out; The **Volume-Up** button has now been programmed.
4. Follow the list in the **Button Assignment Legend** to reference the order in which the steering wheel control buttons need to be programmed.

Note: If the next function on the list is not on the steering wheel, press the **Volume-Up** button for (1) second until the LED comes on to skip that function, and then release the **Volume-Up** button. This will tell the **AXDIS-GMLN11** that this function is not available, and it will move on to the next function.

5. To complete the remapping process, press and hold the **Volume-Up** button until the LED in the **AXDIS-GMLN11** goes out.

Button Assignment Legend

Function #	Function	Function #	Function
1	Volume-Up	10	Band
2	Volume-Down	11	Play/Enter
3	Seek-Up/Next	12	PTT (Push to Talk)
4	Seek-Down/Prev	13	On-Hook
5	Source/Mode	14	Off-Hook
6	Mute	15	Fan-Up *
7	Preset-Up	16	Fan-Down *
8	Preset-Down	17	Temp-Up *
9	Power	18	Temp-Down *

* Not applicable in this application

Note: Some radios may not have these commands. Please refer to the manual provided with the radio, or contact the radio Manufacturer for specific commands recognized by that particular radio.

Continued on the next page

STEERING WHEEL CONTROL SETTINGS: DUAL ASSIGNMENT

Dual Assignment Instructions (Long Button Press)

The **AXDIS-GMLN11** has the capability to assign (2) functions to a single button, except **Volume-Up** and **Volume-Down**. Follow the steps below to program the button(s) to your liking.

Note: **Seek-Up** and **Seek-Down** come pre-programmed as **Preset-Up** and **Preset-Down** for a long button press.

1. Turn on the ignition but do not start the vehicle.
2. Press and hold down the steering wheel control button that you want to assign a long press function to for about (10) seconds, or until the LED flashes rapidly. At this point release the button; the LED will then go solid.
3. Press and release the **Volume-Up** button the number of times corresponding to the new button number selected. Refer to the **Dual Assignment Legend**. The LED will flash rapidly while the **Volume-Up** button is being pressed, and then go back to a solid LED once released. Go to the next step once the **Volume-Up** button has been pressed the desired number of times.

Caution: If more than (10) seconds elapses between pressing the **Volume-Up** button, this procedure will abort, and the LED will go out.

4. To store the long press button in memory, press the button that you assigned a long press button to (the button held down in Step 2). The LED will now go off indicating the new information has been stored.

Note: These steps must be repeated for each button you would like to assign a dual purpose feature to. To reset a button back to its default state, repeat Step 1, and then press the **Volume-Down** button. The LED will go out, and the long press mapping for that button will be erased.

Dual Assignment Legend

Function #	Function	Function #	Function
1	Not allowed	10	Band
2	Not allowed	11	Play/Enter
3	Seek-Up/Next	12	PTT
4	Seek-Down/Prev	13	On-Hook
5	Mode/Source	14	Off-Hook
6	ATT/Mute	15	Fan-Up *
7	Preset-Up	16	Fan-Down *
8	Preset-Down	17	Temp-Up *
9	Power	18	Temp-Down *

* Not applicable in this application

Continued on the next page

Resetting the AXDIS-GMLN11

1. The **Blue** reset button is located inside the interface, between the two connectors. The button is accessible outside the interface, no need to open the interface.
2. Press and hold the reset button for two seconds, and then let go to reset the interface.
3. Refer to “**Programming the Interface**” from this point.



AXDIS-GMLN11

INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



**Metra recommends MECP
certified technicians**