

OVERALL LED FEEDBACK

LED Light	Radio Programming Section	Vehicle Programming Section
Solid Green	Pass	Pass
Slow Red Flash	Fail	Pass
Slow Green Flash	Pass	Fail
Solid Red	Fail	Fail

RADIO LED FEEDBACK

RADIO		LED PATTERN	KEYNOTES (REFERENCE BELOW)
Pioneer/Jensen	G		
JVC	R		
KENWOOD	GG		
SONY/DUAL	GR		
Adaptive SWC radio (internal ladder)	RG		
Adaptive SWC radio (internal ladder 10k)	RR		
Adaptive SWC radio (internal ladder 1k)	GGG		
Reserved for future use	GGR		
ALPINE	GRG		
ALPINE (type 2)	GRR		
AXXERA	RGG		
AXXERA (type 2)	RGR		
MAGNADYNE	RRG		
BOSS	RRR		
CLARION (type 1)	GGGG		
CLARION (type 2)	GGGR		
Reserved for future use	GGRG		
Reserved for future use	GRRR		
Reserved for future use	GRGG		
Reserved for future use	GRGR		
Resistive Radio #1	GRRG		
Resistive Radio #2	GRRR		
Resistive Radio #3	RGGG		
Resistive Radio #4	RGGR		
Resistive Radio #5	RGRG		
Resistive Radio #6	RGRR		

- 1) If the LED pattern shows **JVC**, change the radio type to Kenwood. Refer to the Changing Radio Type document.
- 2) If the LED pattern shows **Alpine**, but an **Alpine** radio isn't installed, make sure the 3.5mm jack is plugged into the radio.
- 3) If no SWC, change the radio type to the opposite radio type. Refer to the **Changing Radio Type** document
- 4) AX-SWC-PARROT required (sold separately). The software in the radio must be rev. 2.1.4 or higher.