

OVERALL LED FEEDBACK

LED Light	Radio Programming Section	Vehicle Programming Section
Solid Green	Pass	Pass
Slow Red Flash	Fail	Pass
Slow Green Flash	Pass	Fail
Solid Red	Fail	Fail

RADIO LED FEEDBACK

RADIO	LED PATTERN	KEYNOTES (REFERENCE BELOW)
Pioneer/Jensen	G	
JVC	R	
KENWOOD	GG	
SONY/DUAL	GR	
Adaptive SWC radio (internal ladder)	RG	
Adaptive SWC radio (internal ladder 10k)	RR	
Adaptive SWC radio (internal ladder 1k)	GGG	
Reserved for future use	GGR	
ALPINE	GRG	
ALPINE (type 2)	GRR	
AXXERA	RGG	
AXXERA (type 2)	RGR	
MAGNADYNE	RRG	
BOSS	RRR	
CLARION (type 1)	GGGG	
CLARION (type 2)	GGGR	
JVC/Kenwood (type 2)	GGRG	
Reserved for future use	GRRR	
Reserved for future use	GRGG	
Reserved for future use	GRGR	
Resistive Radio #1	GRRG	
Resistive Radio #2	GRRR	
Resistive Radio #3	RGGG	
Resistive Radio #4	RGGR	
Resistive Radio #5	RGRG	
Resistive Radio #6	RGRR	

- 1) If the LED pattern shows **JVC**, change the radio type to Kenwood. Refer to the Changing Radio Type document.
- 2) If the LED pattern shows **Alpine**, but an **Alpine** radio isn't installed, make sure the 3.5mm jack is plugged into the radio.
- 3) If no SWC, change the radio type to the opposite radio type. Refer to the **Changing Radio Type** document
- 4) AX-SWC-PARROT required (sold separately). The software in the radio must be rev. 2.1.4 or higher.