

MOST150 Amplifier Retention Interface

Fits Select Audi/Volkswagen Models 2015-2024

Visit AxxessInterfaces.com for more detailed information about the product and up-to-date vehicle specific applications

INTERFACE FEATURES

- Add-on amplifier retention interface
- Retains the factory amplifier in select Audi and VW vehicles
- Retains balance
- Micro "B" USB updatable
- 1-year limited warranty

INTERFACE COMPONENTS

- MOST150 interface
- T-harness

RELATED ITEMS

- AXTC-VW2
- AXDI-VW2

APPLICATIONS

AUDI

A5	2017-2024
A8	2017-2024
TT	2015-2020

VOLKSWAGEN

Golf MK7/8	2017-2024
Jetta	2017-2024
Tiguan	2017-2024
Touareg	2016-2024

TABLE OF CONTENTS

Connections....2
Installing the Fiber Optic Cable....3
Connections and Installation....4
Testing....4

TOOLS REQUIRED


- Crimping tool & connectors, or solder gun, solder & heat shrink
- Tape
- Wire cutter
- Zip ties

Product Info

ATTENTION: *With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product.*
NOTE: *Refer also to the instructions included with the aftermarket accessory before installing this device.*

© COPYRIGHT 2026 METRA ELECTRONICS CORPORATION

CONNECTIONS: INSTALLING THE FIBER OPTIC CABLE

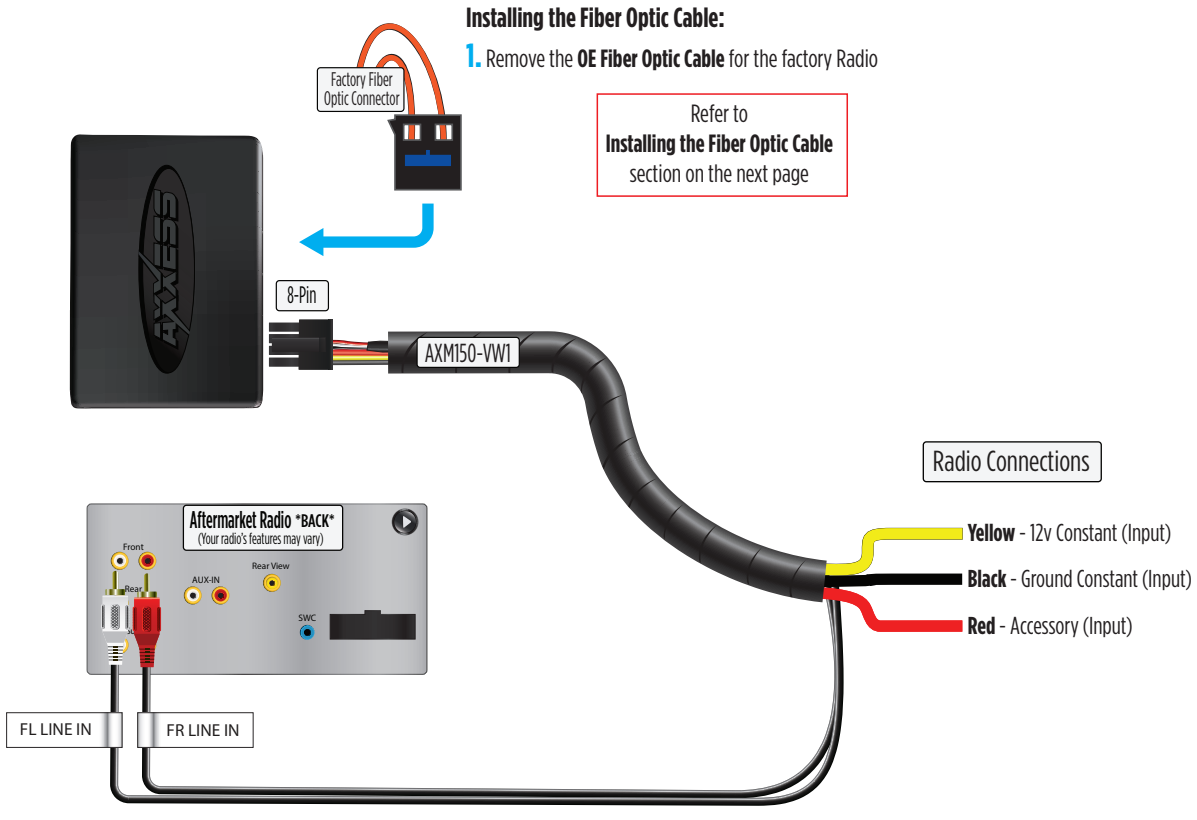

INSTALLING THE FIBER OPTIC CABLE


Installing the Fiber Optic Cable:

Removal of the original fiber optic connection is required to adapt to the Media Oriented System Transport (MOST) interface.


- Seat the **AXM150-VW1** amplifier interface in the black connector housing provided with this kit and snap the housing in place. (Figure A)
- From the original **Fiber Optic Connector:** Using a pick tool, carefully pull this tab towards the outside edge for the connector housing. Gently remove the fiber optic insert from the connector. (Figure B)
- From the **MOST Interface:** Push the tab toward the dust cover and, using a needle nose plier, remove the dust cover. Replace the connector with the factory fiber optic cables into the MOST interface's black connector housing. (Figure C)



(Figure A)

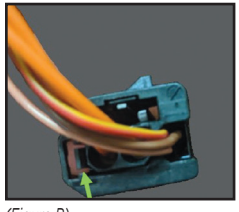

(Figure B)

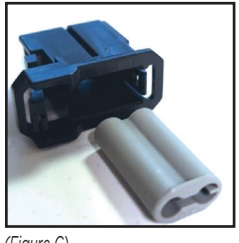

(Figure C)

CONNECTIONS AND INSTALLATION

Connections and Installation

- Connect the **AXM150-VW1 harness** to the **AXM150-VW1 interface**.
- Connect the **Red** (right) and **White** (left) RCA jacks to the front full range outputs from the aftermarket radio.
- Connect the **Red/White** wire from the **AXM150-VW1 harness** to amp turn-on.
- Connect the **MOST** connector to the **MOST** port on the **AXM150-VW1 interface**
- Tape off and disregard the **Blue/Red** wire
  1. Connect the **Yellow** wire form the **AXM150-VW1** to constant.
  2. Connect the **Black** wire from the **AXM150-VW1** to ground.

Testing

- Cycle the ignition on and test the installation for functionality.
  Note: Fade control will be lost.

Having difficulties? We're here to help.

Contact our Tech Support line at:
386-257-1187

Or via email at:
techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM
Saturday: 10:00 AM - 5:00 PM
Sunday: 10:00 AM - 4:00 PM

MECP
MOBILE ELECTRONICS CERTIFIED PROFESSIONAL

Metra recommends MECP certified technicians

© COPYRIGHT 2026 METRA ELECTRONICS CORPORATION