



### Fits Honda **Ridgeline** (without factory NAV) **2006-2014**


Visit [MetraOnline.com](http://MetraOnline.com) for more detailed information about the product and up-to-date vehicle specific applications

#### KIT FEATURES

- Stereo installation kit designed to fit any standard 4" tall aftermarket radio
- Painted dark charcoal gray
- Made from the highest quality ABS plastic for an original factory-like fit and finish
- Use 95-7884B for vehicles equipped with factory navigation

#### KIT COMPONENTS

- A) Radio housing • B) Radio brackets • C) Pocket brackets • D) Keps nuts (2) • E) Carriage bolts (2)

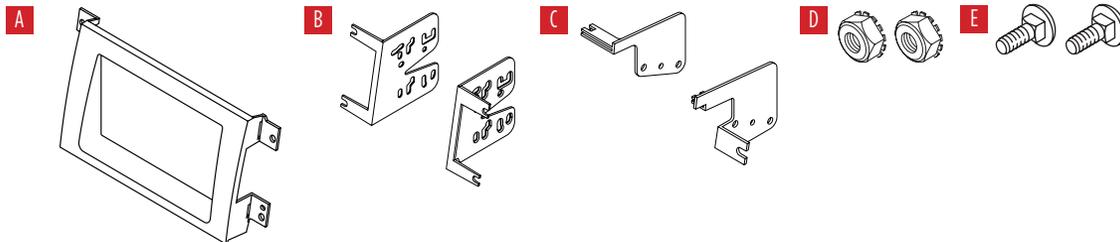

#### TABLE OF CONTENTS

|                        |   |
|------------------------|---|
| Dash Disassembly ..... | 2 |
| Kit Assembly .....     | 3 |

#### WIRING & ANTENNA CONNECTIONS (sold separately)

- Wiring Harness: 70-1721 — 1998-2008  
 • 70-1729 — 2009-2014  
 Antenna Adapter: 40-HD10


#### TOOLS REQUIRED

- Small flat blade screwdriver
- Phillips screwdriver


**Attention!** With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.

## DASH DISASSEMBLY

1. Unclip and remove entire panel surrounding radio and a/c control all the way over to left side of steering wheel. (Figure A)
2. Remove (5) Phillips screws securing the radio and pocket assembly. (Figure B)

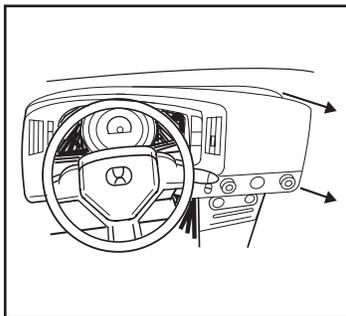


(Figure A)

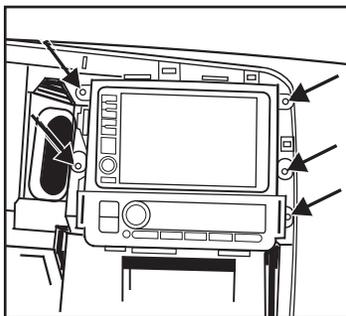


(Figure B)

3. Remove (2) Phillips screws (1 per side) securing factory pocket to radio/pocket bracket assembly. (Figure C, D)

*Continue to Kit Preparation*

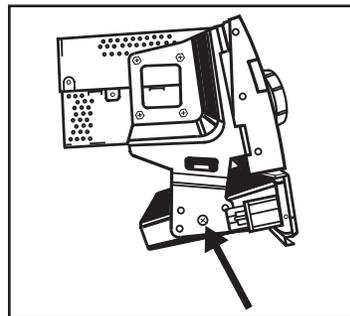


(Figure C)

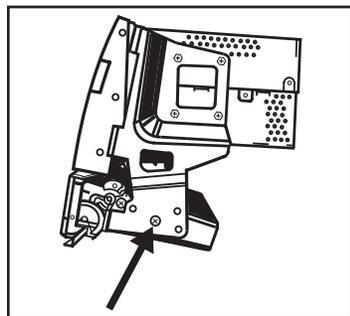


(Figure D)

## KIT ASSEMBLY

1. Attach the **pocket brackets** to the **radio housing** using the included carriage bolts and Keps nuts. (Figure A)
2. Position the factory pocket into the assembled radio housing/pocket bracket assembly and secure with the factory hardware. (Figure B)

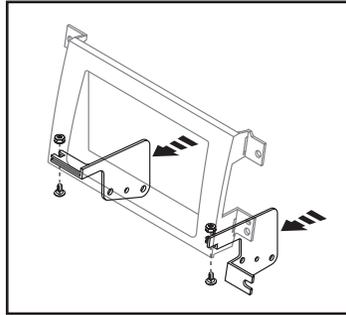


(Figure A)

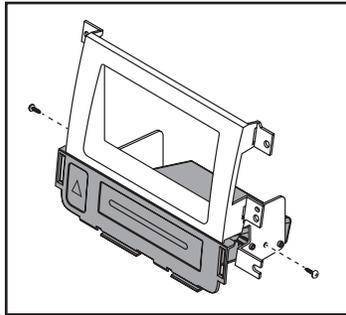


(Figure B)

3. Slide the **radio brackets** into the **radio housing**, aligning the slots in the **radio housing** with the tabs on the **radio brackets**. (Figure C)
4. Slide the radio into the completed assembly and secure it using screws supplied with the radio. (Figure D)
5. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXCESS.
6. Mount the new radio assembly into the dash and reassemble the dash in reverse order of disassembly.

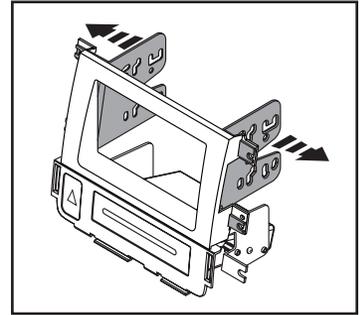

(Figure C)

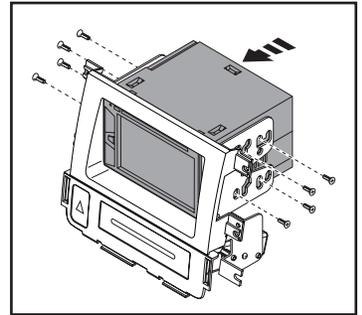

(Figure D)



**95-7870G**  
INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

**386-257-1187**



Or via email at:

[techsupport@metra-autosound.com](mailto:techsupport@metra-autosound.com)

**Tech Support Hours (Eastern Standard Time)**

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



**Metra recommends MECP  
certified technicians**