



Speaker wires

Locate the grommet on the rear of the pod. Insert the wire leaving enough slack to mount the speaker.



Metra Insert

Using a small Phillips screw driver, insert the logo plate and secure with the (2) screws. Logo can be mounted “up or down” depending on the look desired.



Mounting the Speakers




Safety first: Please wear proper equipment when cutting or drilling.

These PODS have been designed to be universal, this fit will require holes to be drilled in the PODs mounting flange.

It's recommended to install speakers on a bench. Place the speaker into the opening, mark the needed holes.

Using the hardware provided with the speakers, select the proper drill bit and carefully drill the required holes into the flange.

Connect up the speaker wires, from the previous steps and proceed to mount the PODs to the vehicle.

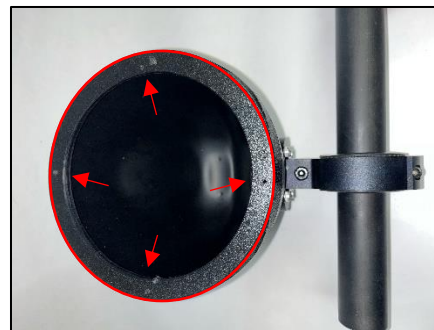




MPS-ULCAN6-5 or MPS-ULCAN8

Installation Instructions

1. Using a 5mm HEX remove screws from mount.



2. Select correct adaptor and load into the two halves of the mount

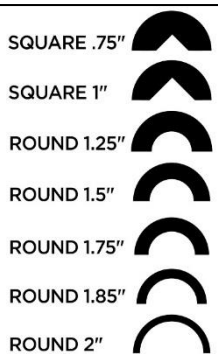

3. Using 2.5mm set screw adjust set desired CAN rotation.

Recommended to hand tighten, plus 1/8th turn



4. Using 4mm HEX, tighten the mount to the tube pod.

Maximum recommended torque is 2 Ft. LBS.



5. mount the CAN to the tube, using a 5MM HEX and tighten the clamps evenly, alternating until tight.

Maximum recommended torque is 10 Ft. LBS





Interior Volume: 0.05^{ft3}



Interior Volume: 0.1^{ft3}