



LOC T-Harness Full System Install

To power the entire system, some rewiring is necessary. By utilizing the 8-pin connectors and harnesses you can integrate a 4-channel amplifier into your aftermarket system. The harness includes provisions for routing the outputs of your aftermarket amplifier back through the factory wiring to reach the speakers. Clearly marked labels on the wire bundle indicate which wires to disconnect and where, as well as which wires should be connected to the outputs of your aftermarket amplifier.

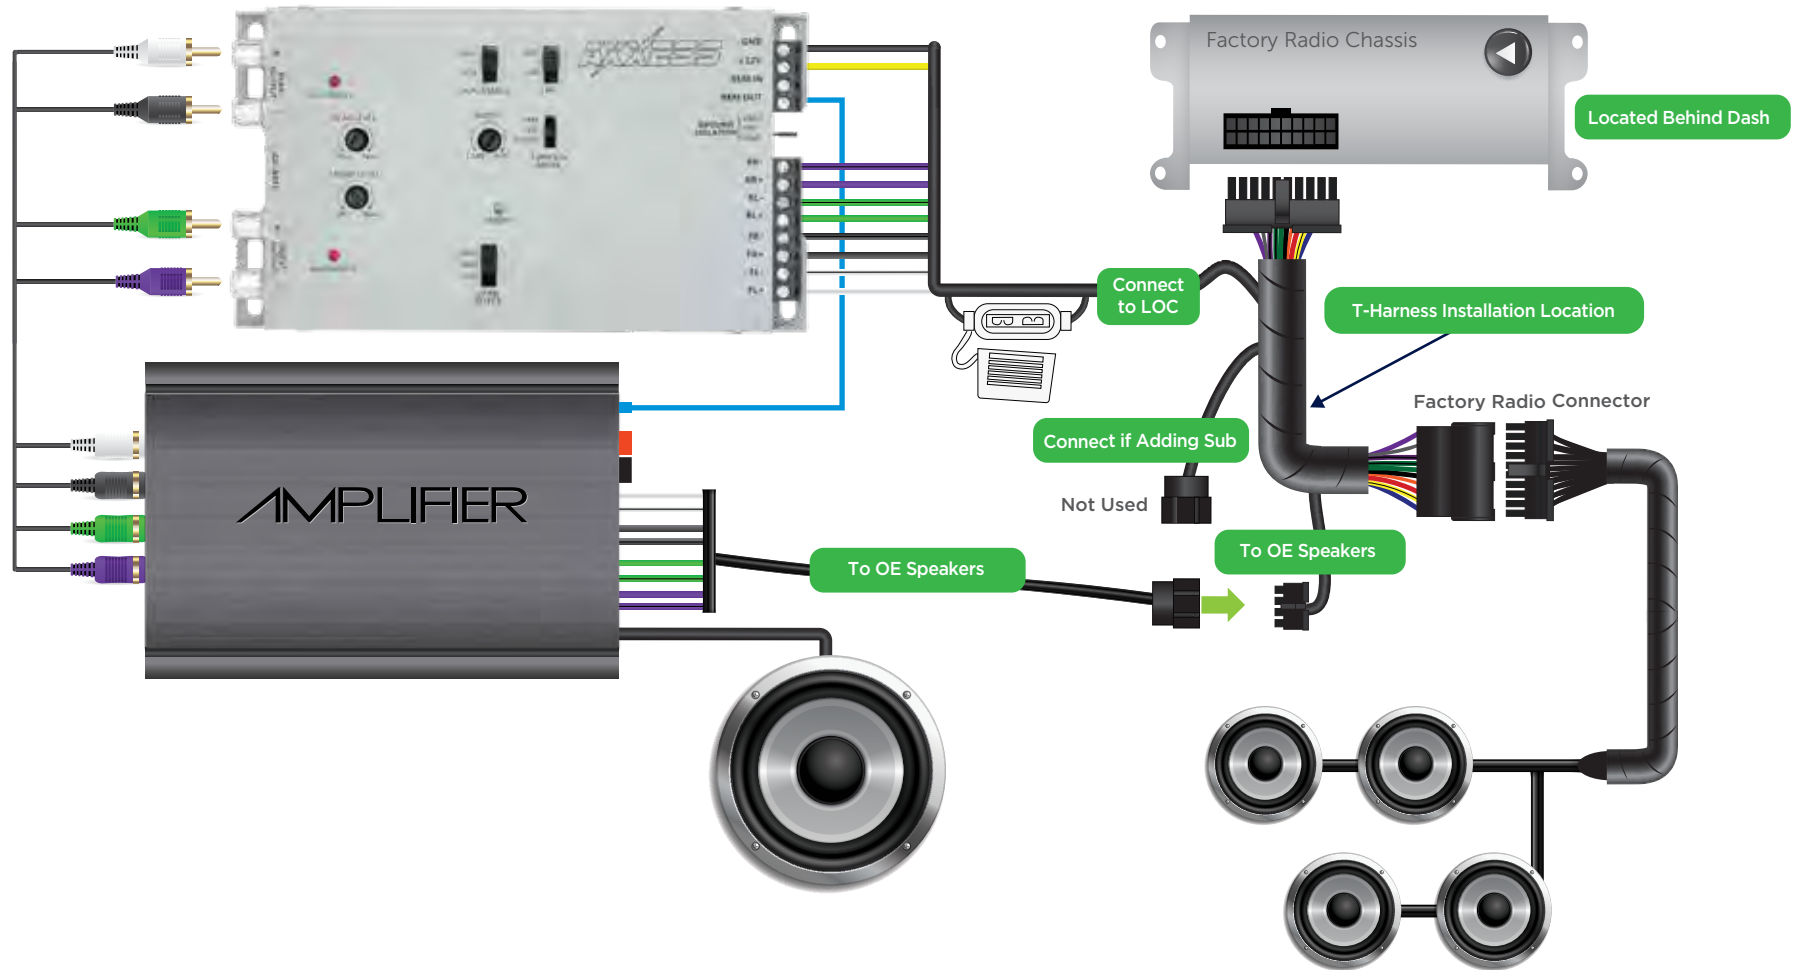

LOC T-Harness Subwoofer Install

If adding a subwoofer amplifier, the T-harness is equipped with mating 8-pin plugs that remain connected, ensuring that the factory speakers continue to receive power from the radio. On the radio side of the T-harness, there is a pre-wired speaker level output audio signal for a dedicated sub amp or powered subwoofer, making the installation process highly versatile and compatible with various setups.

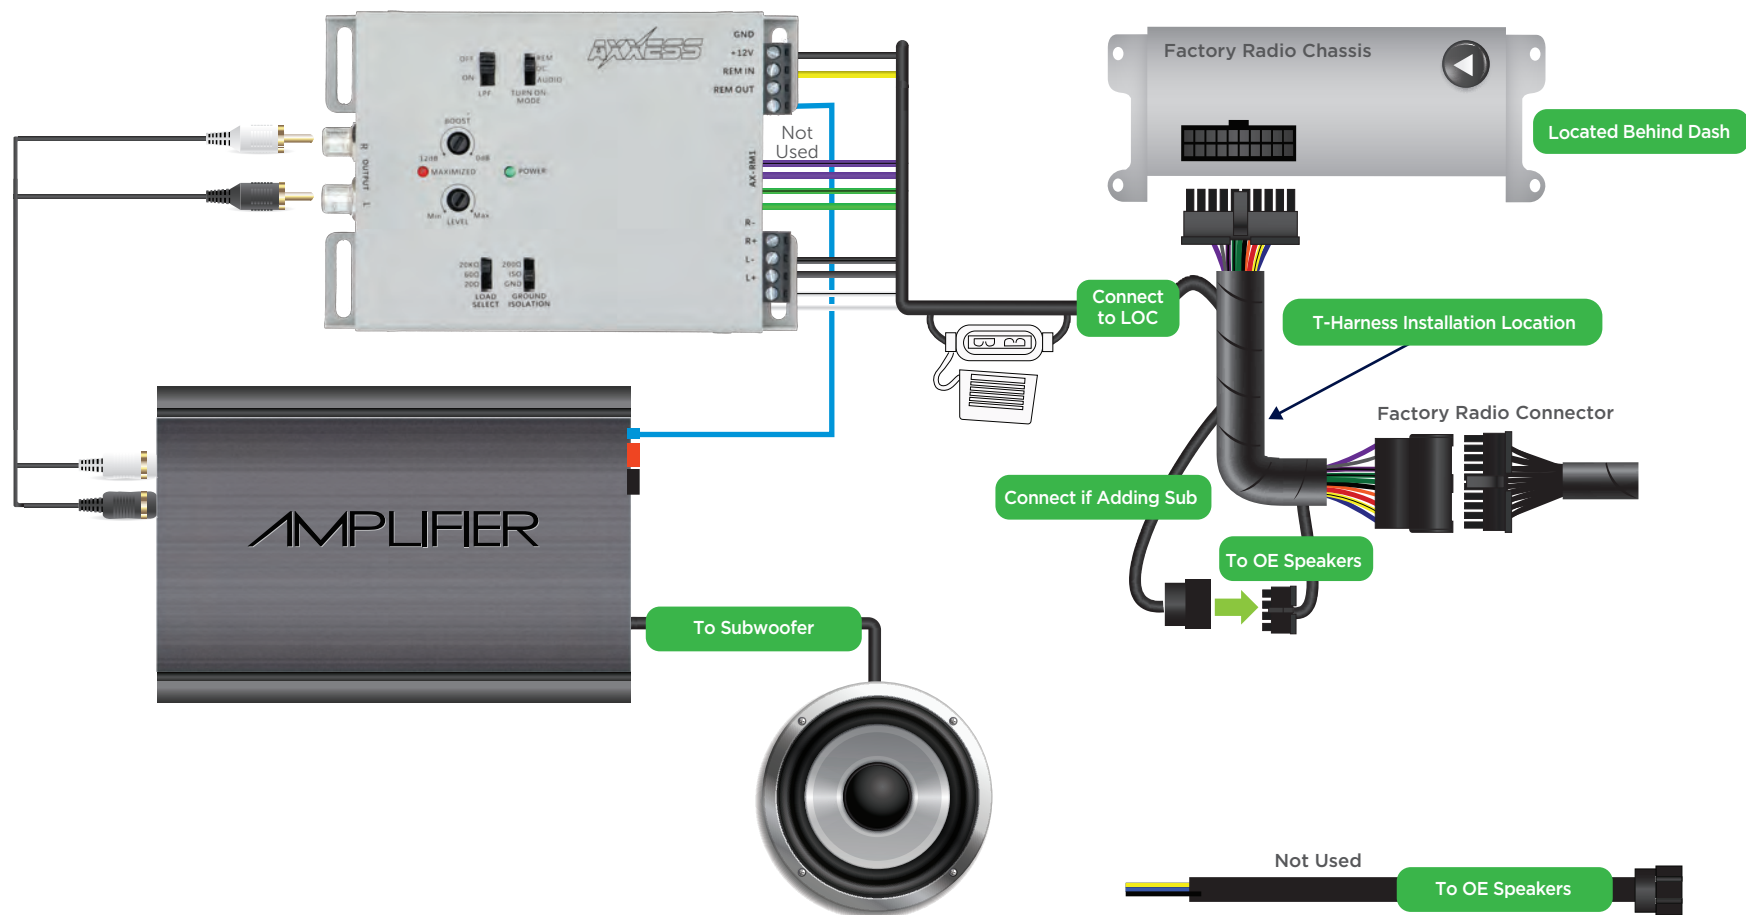

Metra Electronics Corporation
460 Walker Street, Daytona Beach, FL 32117
386-221-0932 | MetraOnline.com

Copyright ©2025 Metra Electronics Corporation MADE IN CHINA