



Fits GMC Terrain 2018-2024

Visit [MetraOnline.com](https://www.metraonline.com) for more detailed information about the product and up-to-date vehicle specific applications

KIT FEATURES

- Stereo installation kit designed for aftermarket radios with a shallow chassis
- Sub-dash modification required for standard 4" Double-DIN or ISO Single-DIN radio installations
- Pocket required for Single-DIN installations (88-00-9004 sold separately)
- Panel designed to include vehicles with either the factory 7" or 8" screen
- Painted scratch-resistant matte black to match the factory finish

KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Phillips screws (4)

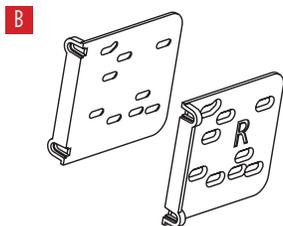
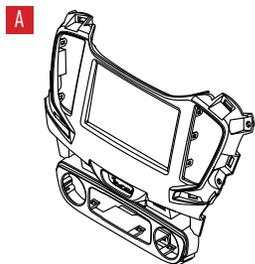


TABLE OF CONTENTS

Dash Disassembly.....	2
Kit Preparation.....	3-4
Kit Assembly.....	5

WIRING & ANTENNA CONNECTIONS

Wiring Harness: Visit [metraonline.com](https://www.metraonline.com) and [auxessinterfaces.com](https://www.auxessinterfaces.com) for audio/video and steering wheel control interface options.
Antenna Adapter: 40-EU55


TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver
- Socket wrench • Torx screwdriver


Attention! With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.

DASH DISASSEMBLY


1. Unclip and remove the (2) silver panels from around the a/c vents. (Figure A)
2. Unclip and remove the trim panel from around the shifter button panel. (Figure B)
3. Remove (4) Torx screws securing the shifter button control then unclip and move to the side. (Figure C)
4. Unclip and remove the trim panel on the edge of the passenger side of the dash. (Figure D)

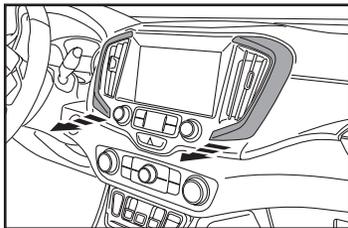

(Figure A)

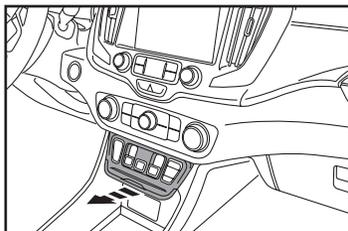


(Figure B)

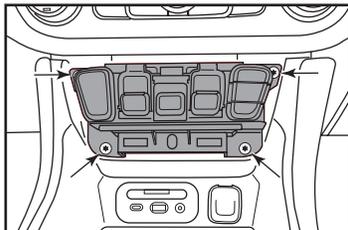


(Figure C)

5. Remove (1) 9/32 screw from the passenger vent panel under trim panel removed in step 4. (Figure D)
6. Unclip and remove the passenger vent trim panel that extends all the way to the start button. (Figure E)
7. Remove (7) 9/32 screws from the trim panel around the factory radio display and then unclip and remove the panel including the a/c controls. (Figure F)


Continue to Kit Preparation

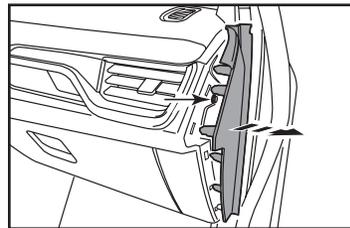

(Figure D)

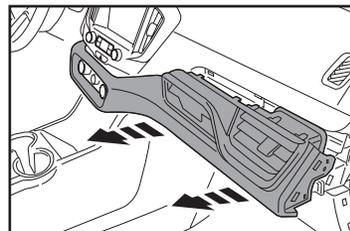

(Figure E)

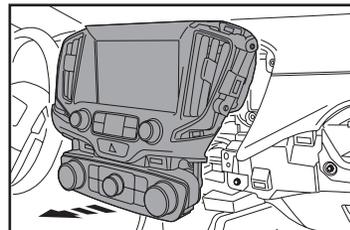


(Figure F)


KIT PREPARATION

From the factory dash panel:


1. Remove the vents, hazard button and climate controls. (Figures A ,B)

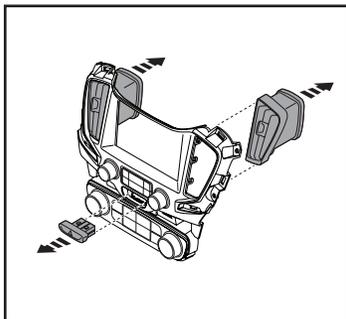

(Figure A)

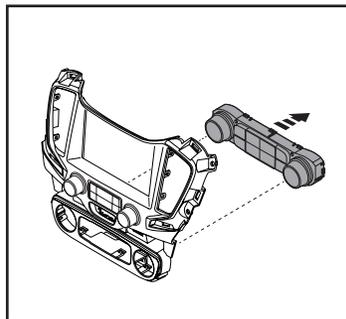

(Figure B)

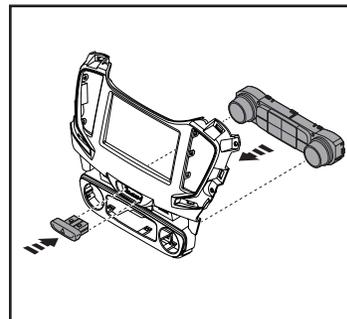

(Figure C)

To the 95-3315B dash panel:

1. Snap the hazard button and climate controls into **radio trim panel**. (Figure C)


Continued on the next page

KIT PREPARATION *(CONT.)*

For full size DDIN radio:

1. Trim area shaded at top of radio cavity in subdash. Lower area shaded may need to be trimmed to fit. (Figure A)


Continue to Kit Assembly

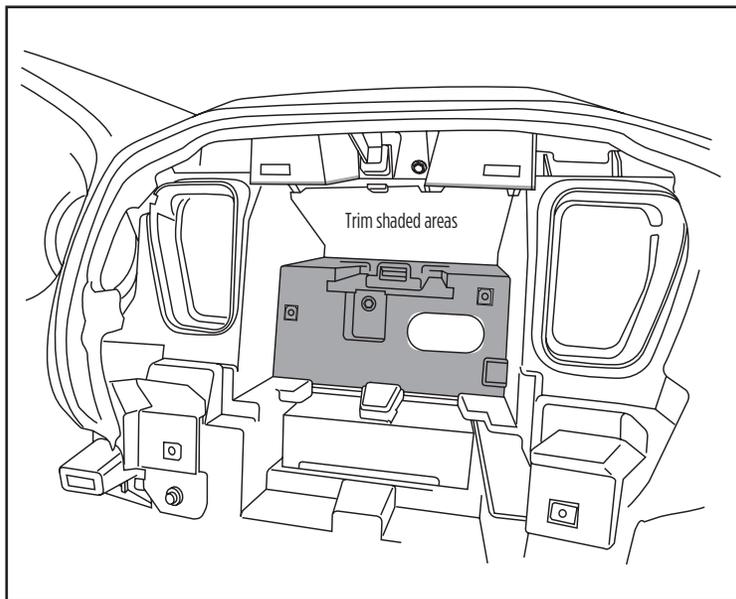


(Figure A)

KIT ASSEMBLY


1. Attach the **radio brackets** to the **radio trim panel** using the (4) Phillips screws supplied. (Figure A)
2. Slide the radio into the radio trim panel/bracket assembly, and then secure it to the radio brackets using screws supplied with the radio. (Figure B)
3. Snap the vents into the completed radio trim panel assembly. (Figure C)
4. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXXESS. Re-connect the negative battery terminal and test the radio for proper operation.
5. Reassemble the dash in reverse order of disassembly.

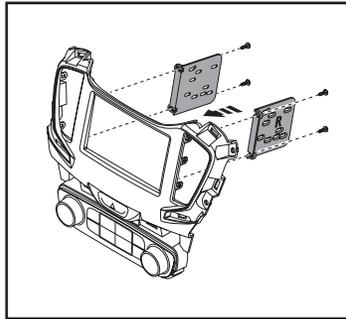

(Figure A)

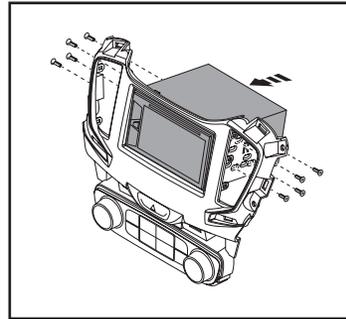

(Figure B)

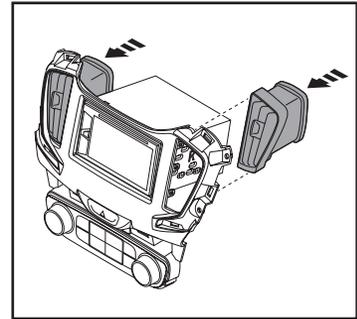

(Figure C)



95-3315B
INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



**Metra recommends MECP
certified technicians**