



AXDI-GMLN10

INSTALLATION INSTRUCTIONS



INTERFACE COMPONENTS

- AXDI-GMLN10 interface
- AXDI-GMLN10 harness

APPLICATIONS

CHEVROLET

Camaro (1) 2016-2018
Colorado (1) 2017-2021
Cruze (2) 2016-2018
Equinox (1) 2018
Malibu (2) 2016-2018

Silverado (1) 2016-2018
Silverado LD (1) 2019
Trax (2) 2017-2020
GMC
Acadia (1) 2017-2019
Canyon (1) 2017-2018

(1) With RPO code IOB • (2) With RPO code IOA

The **IOA/IOB codes**, if applicable, are in the **Service Parts Identification labels** in the following locations: **Rear Compartment Floor:** Malibu
Glovebox: Canyon/Colorado/Cruze/Equinox/Silverado/Sierra **Note: RPO (QR codes)** are in the driver door jam or “**B Pillar**” on the **VIN label**.

Data Interface

Fits Select Chevrolet/GMC Models **2016-2021**

INTERFACE FEATURES

- Designed for non-amplified systems or bypassing a factory amplifier
- Provides accessory power (12-volt 10-amp)
- Retains R.A.P. (Retained Accessory Power)
- Provides NAV outputs (parking brake, reverse, speed sense)
- NOT pre-wired for AXSWC
- Retains factory chimes
- Retains all warning chimes through onboard speaker
- Retains the factory backup camera, if equipped
- Retains balance & fade
- High-level speaker input
- Micro “B” USB updatable

Product Info



TABLE OF CONTENTS

| | |
|---------------------------------------|---|
| Connections: LD-LCLAN-10 Harness..... | 2 |
| Installation | 3 |
| Programming..... | 3 |

OPTIONAL ACCESSORIES (sold separately)

Extension Harness: AXEXH-GM10

Visit AxxessInterfaces.com for more detailed information about the product and up-to-date vehicle specific applications.


TOOLS & INSTALLATION ACCESSORIES REQUIRED

- Crimping tool and connectors, or solder gun, solder, and heat shrink
- Tape • Wire cutter • Zip-ties

ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product.

NOTE: Refer also to the instructions included with the aftermarket radio.

CONNECTIONS: LD-LCLAN-10 HARNESS

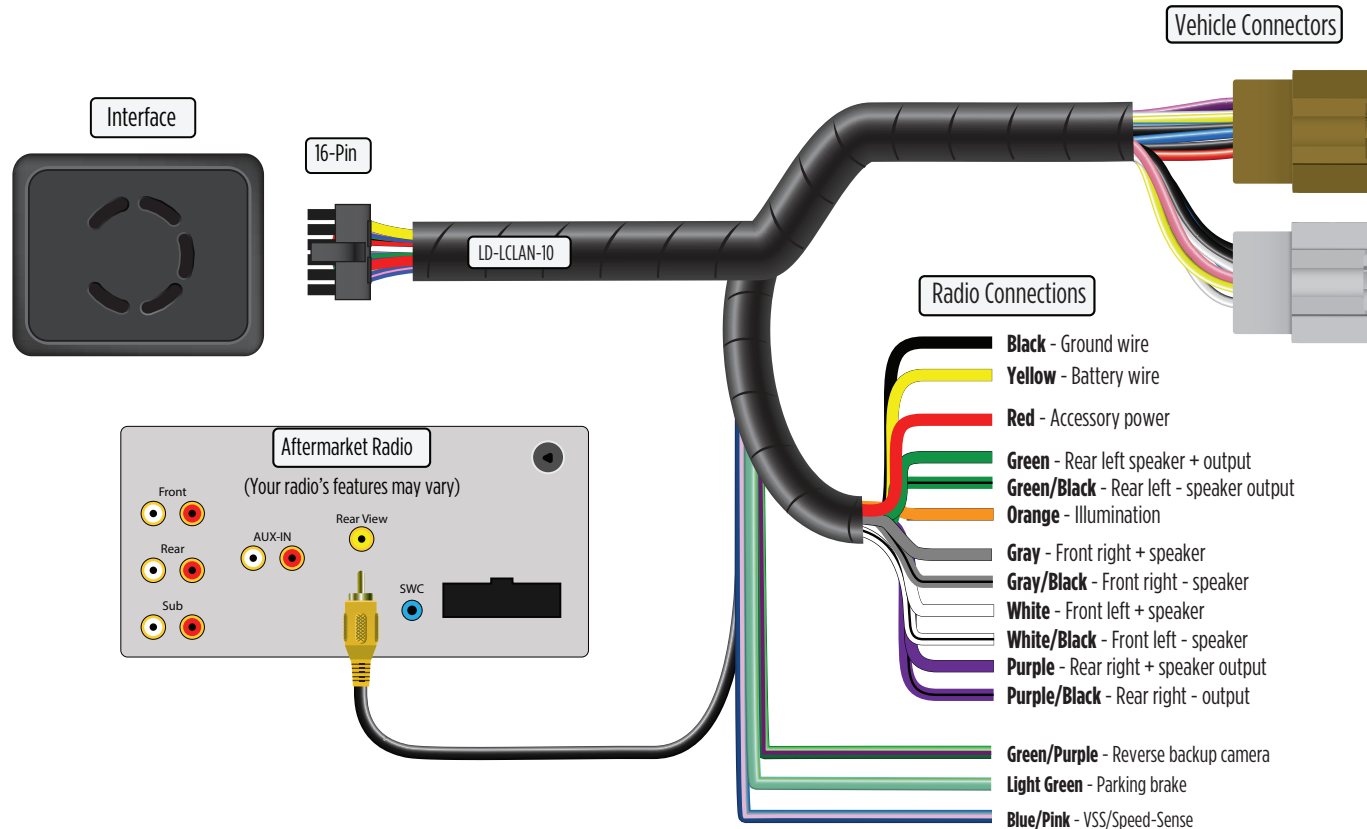

INSTALLATION

With the key in the off position:

1. Locate the factory radio harness in the vehicle and complete all necessary connections to the aftermarket radio.
2. Connect the **AXDI-GMLN10 harness** to the **AXDI-GMLN10 interface**, and then to the factory radio harness in the vehicle.

Note: For the Equinox and Malibu, use part number **AXEXH-GM10** (sold separately) to extend the wiring harness to the right of the glovebox where the radio brain is located.

PROGRAMMING

Attention: If the interface loses power for any reason, the following steps will need to be performed again.

1. Turn the key (or push-to-start button) to the ignition position and wait until the radio comes on.
Note: If the radio does not come on within 60 seconds, turn the key to the off position, disconnect the interface, check all connections, reconnect the interface, and then try again.
2. Cycle the key off, then back on. If the driver's door is closed, open and close the door.
3. Test all functions of the installation for proper operation, before reassembling the dash.

Note: The vehicle must be running for the factory camera to power on.



AXDI-GMLN10

INSTALLATION INSTRUCTIONS

Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



**Metra recommends MECP
certified technicians**