



INTERFACE COMPONENTS

- Amplifier Integration interface
- Extension harness
- Vehicle-specific T-harness
- Bass knob

APPLICATIONS

Visit AxxessInterfaces.com for current application list

Amplifier Integration Interface

Fits Select Toyota Models **2022-Up**

FEATURES

- Designed for non-amplified and amplified systems
- Provides 6 channels of 5-volt RMS audio
- Non-fading full range output (channels 5 & 6)
- Simple plug-n-play installation behind the radio
- No programming required
- Dual-colored LED feedback light
- Input: 50W per channel
- Amp turn-on trigger (DC) 250mA
- 2-channel S/PDIF out (front)

www.MetraOnline.com

For **Dash Disassembly Instructions**, refer to metraonline.com. Enter the year, make, and model of the vehicle in the **Vehicle Fit Guide** for **Radio Install kits**.



TABLE OF CONTENTS

Installation Options	2
Installation	3
Adding Amp/Amps to a Factory System	
Amplified.....	4
Non-amplified.....	5
Troubleshooting.....	6

TOOLS & INSTALLATION ACCESSORIES REQUIRED

- Crimping tool and connectors, or solder gun, solder, and heat shrink
- Tape
- Wire cutter
- Zip ties
- Multimeter

Visit AxxessInterfaces.com for more detailed information about the product and up-to-date vehicle specific applications.

ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product.

NOTE: Refer also to the instructions included with the aftermarket accessory before installing this device.

INSTALLATION OPTIONS

Adding a full-range amp and subwoofer to a factory system:

This feature offers the ability to add a full-range amp and sub to a factory system, whether amplified* or non-amplified. (Refer to **Pages 4 & 5**)

* For amplified models the amp must be bypassed/unplugged. Refer to **MetraOnline.com** for the vehicle specific amplifier bypass harness.

Note: The interface provides a 12-volt 1-amp output to turn on aftermarket amp(s). If installing multiple amps, an SPDT automotive relay will be required if the amp turn-on current of all amps combined exceeds 1-amp. Use Metra part number E-123 (sold separately) for best results.

INSTALLATION

Installation:

1. Disassemble the dash, unplug all connectors, and remove the factory radio.*
 2. Install the **AXAMP-TY5 vehicle T-harness** to the vehicle radio harness and make all the necessary connections. Leave the 2-pin amp turn on wire disconnected.
 3. Plug the 20-pin harness from the **AXAMP-TY5 T-harness** into the interface.
 4. Connect the **Amp Turn-on** wire.
- * **NOTE:** If the vehicle is amplified, connect the 8-pin harness “A” to 8-pin harness “C”.
5. Connect the 2-pin **Amp Turn On Wire** to the interface and then connect to the aftermarket amplifiers.
 6. Connect RCAs to the **FRONT, REAR or SUB** output of the **AXAMP-TY5 interface**, then connect to the corresponding amplifier.
 7. Adjust your aftermarket amplifier to a desired listening level.

Bass Knob Adjustment:

The bass knob connects to the 2 wires from the 20-pin connector labeled **BASS KNOB**.

The bass knob is used to adjust the output of Channels 5 & 6 of the AXAMP.

Adjustment is as follows:

Counterclockwise turn lowers the volume of channels 5 & 6.


Clockwise turn raises the volume of channels 5 & 6.

Extension Harness (non-amplified only):

1. Connect the included **Extension Harness** 8-pin harness “**B**” to the 8-pin harness “**A**” on the **vehicle T-harness** to connect factor speaker locations.
2. Connect the end of the **Extension Harness** to the aftermarket amplifier.


* For amplified models the amp must be bypassed/unplugged. Refer to www.MetraOnline.com for the vehicle specific amplifier bypass harness.

ADDING AMPLIFIER/AMPLIFIERS TO A FACTORY SYSTEM

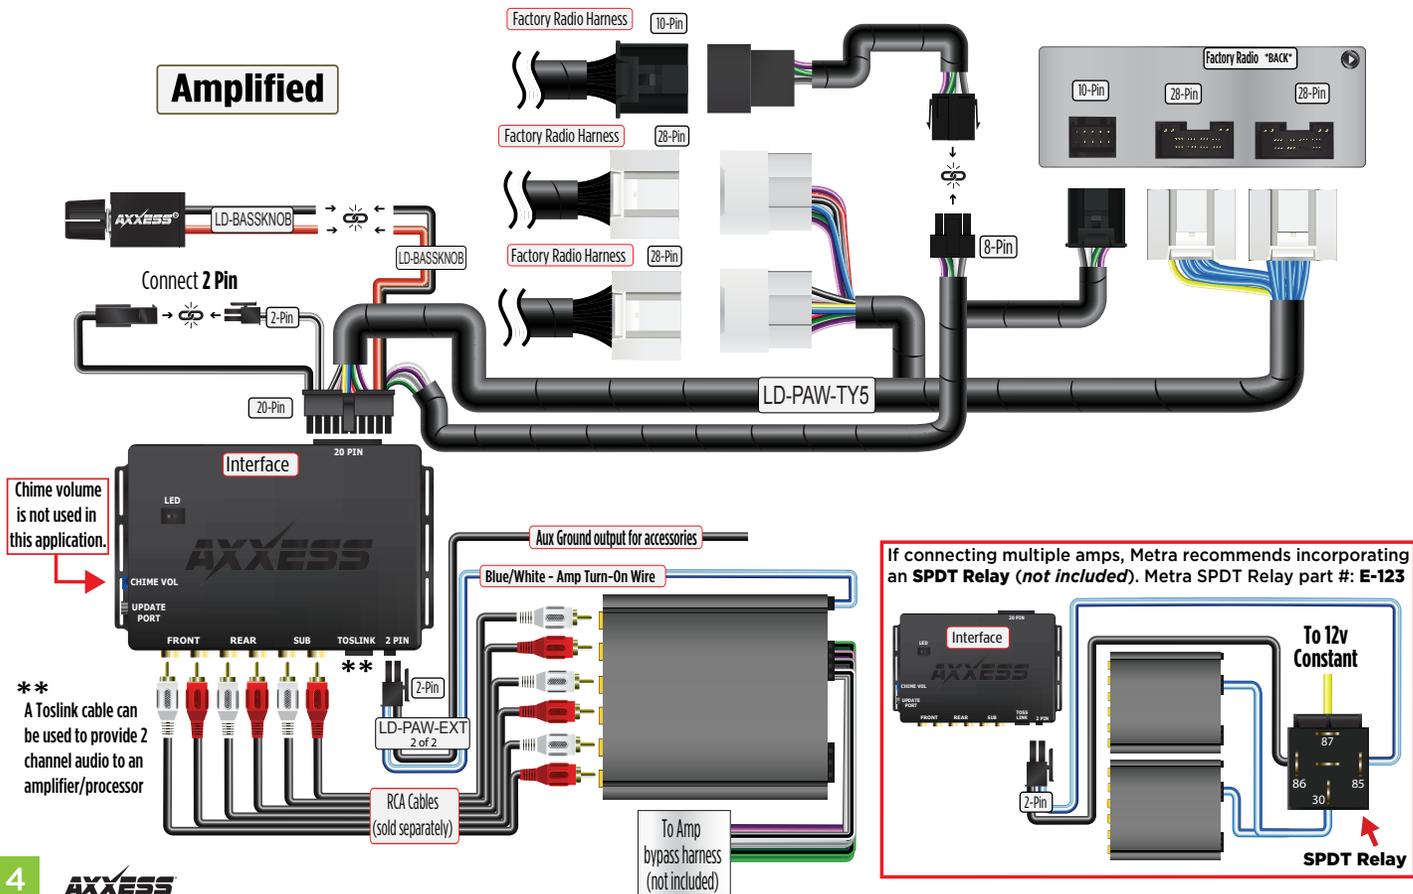


ADDING AMPLIFIER/AMPLIFIERS TO A FACTORY SYSTEM CONT.

Non-Amplified

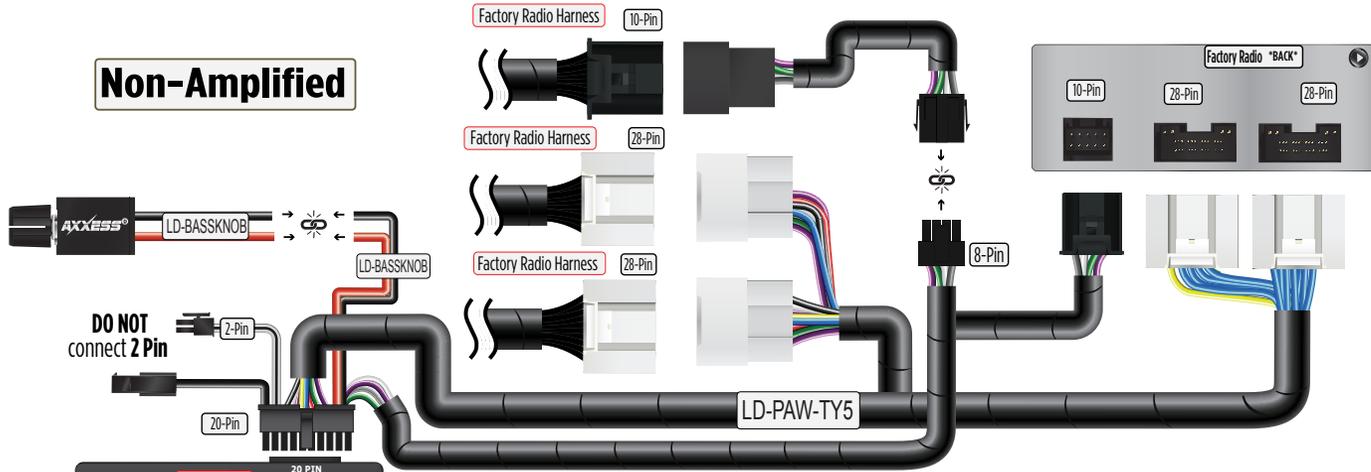


Chime volume is not used in this application.

**
A Toslink cable can be used to provide 2 channel audio to an amplifier/processor

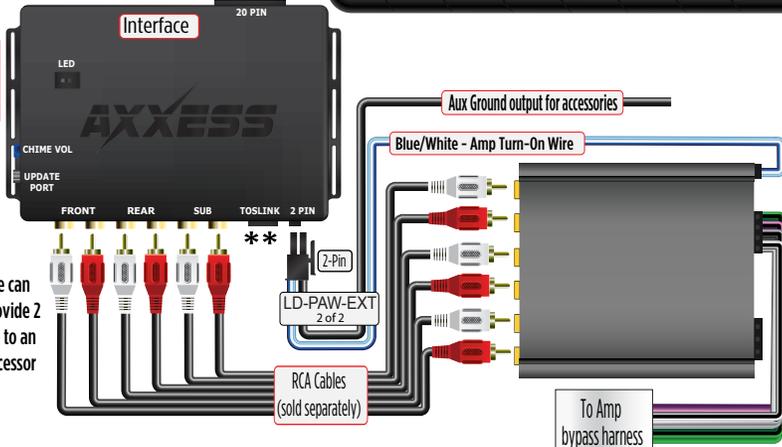

If connecting multiple amps, Metra recommends incorporating an **SPDT Relay** (not included). Metra SPDT Relay part #: **E-123**

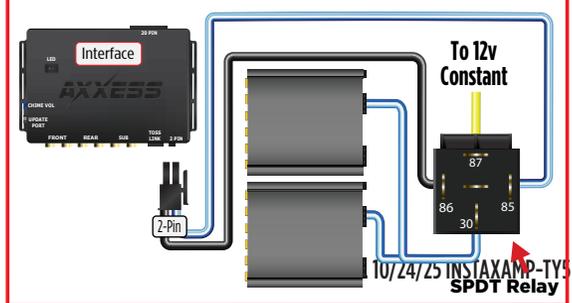

TROUBLESHOOTING

Final LED Feedback

At the end of programming the LED will turn **Solid Green** which indicates programming was successful. If the LED didn't turn **Solid Green**, reference the list below to understand which programming section the problem may stem from.

Feedback Light	Condition/Status
Solid Green	All Good
Solid Red	Missing Can Frames
Blink Red	Clipping Output
Green/Red	Missing Adv. (Comm Frames)



AXAMP-TY5

INSTALLATION INSTRUCTIONS

Scan QR Code



Further troubleshooting steps and information can be located at:

metraonline.com/product/AXAMP-TY5

Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



**Metra recommends MECP
certified technicians**