

**INTERFACE COMPONENTS**

- AXAMP-FD3 Amplifier integration interface
- AXAMP-FD3 vehicle T-harness
- Bass knob
- LD-DSP-RPAD3

APPLICATIONS

Visit AxxessInterfaces.com for current application list

Amplifier Integration Interface Fits Select Ford Models **2018-2023**

INTERFACE FEATURES

- Designed for non-amplified systems
- Provides 6 channels of 5-volt RMS audio
- Non-fading full range output (channels 5 & 6)
- Simple plug-n-play installation behind the radio
- No programming required
- Dual-colored LED feedback light
- Input: 50W per channel
- Amp turn-on trigger (DC) 250mA
- 2-channel S/PDIF out (front)

TABLE OF CONTENTS

Installation & Installation Options.....	2
Adding Amp(s) to a Factory System.....	3
Troubleshooting.....	4

TOOLS & INSTALLATION ACCESSORIES REQUIRED

- Crimping tool and connectors, or solder gun, solder, and heat shrink
- Tape
- Wire cutter
- Zip ties
- Multimeter

Visit AxxessInterfaces.com for more detailed information about the product and up-to-date vehicle specific applications.

www.MetraOnline.com

For **Dash Disassembly Instructions**, refer to metraonline.com. Enter the year, make, and model of the vehicle in the **Vehicle Fit Guide** for **Radio Install kits**.



ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product.

NOTE: Refer also to the instructions included with the aftermarket accessory before installing this device.

INSTALLATION OPTIONS

Adding a full-range of amps and subwoofer to a factory system:

This feature offers the ability to add a full-range amp and sub to a factory system.

Note: The interface provides a 12-volt 1-amp output to turn on aftermarket amp(s). If installing multiple amps, an SPDT automotive relay will be required if the amp turn-on current of all amps combined exceeds 1-amp. Use Metra part number [E-123](#) (sold separately) for best results.

INSTALLATION

1. Disassemble the dash, unplug all connectors, and remove the factory radio.*
2. Install the **AXAMP-FD3 vehicle T-harness** to the vehicle radio harness and make all the necessary connections.
3. Plug the 20-pin harness from the **AXAMP-FD3 T-harness** into the interface.
4. Connect the 2-pin **Amp Turn On Wire** to the interface and then connect to the aftermarket amplifiers
5. Connect RCAs to the **FRONT, REAR or SUB** output of the **AXAMP-FD3 interface** and then connect to the corresponding amplifier.
6. Adjust your aftermarket amplifier to a desired listening level.

Bass Knob Adjustment:

The bass knob connects to the 2 wires from the 20-pin connector labeled **BASS KNOB**.

The bass knob is used to adjust the output of Channels 5 & 6 of the AXAMP.

Adjustment is as follows:

Counterclockwise turn lowers the volume of channels 5 & 6.

Clockwise turn raises the volume of channels 5 & 6.

RPAD Installation:

NOTE: If the vehicle is not amplified, you will need to install the included RPAD or RPAD2 to the 8-pin harness “**C**” located on the **vehicle T-harness** plugged into the factory radio.


If the vehicle is amplified, connect the 8-pin harness “**A**” to 8-pin harness “**C**”.

Extension Harness:

1. Connect the included **Extension Harness** 8-pin harness “**B**” to the 8-pin harness “**A**” on the **vehicle T-harness** to connect factory speaker locations.
2. Connect the end of the **Extension Harness** to the aftermarket amplifier.

* For amplified models the amp must be bypassed/unplugged. Refer to [www.MetraOnline.com](#) for the vehicle specific amplifier bypass harness.

ADDING AMPLIFIER/AMPLIFIERS TO A FACTORY SYSTEM

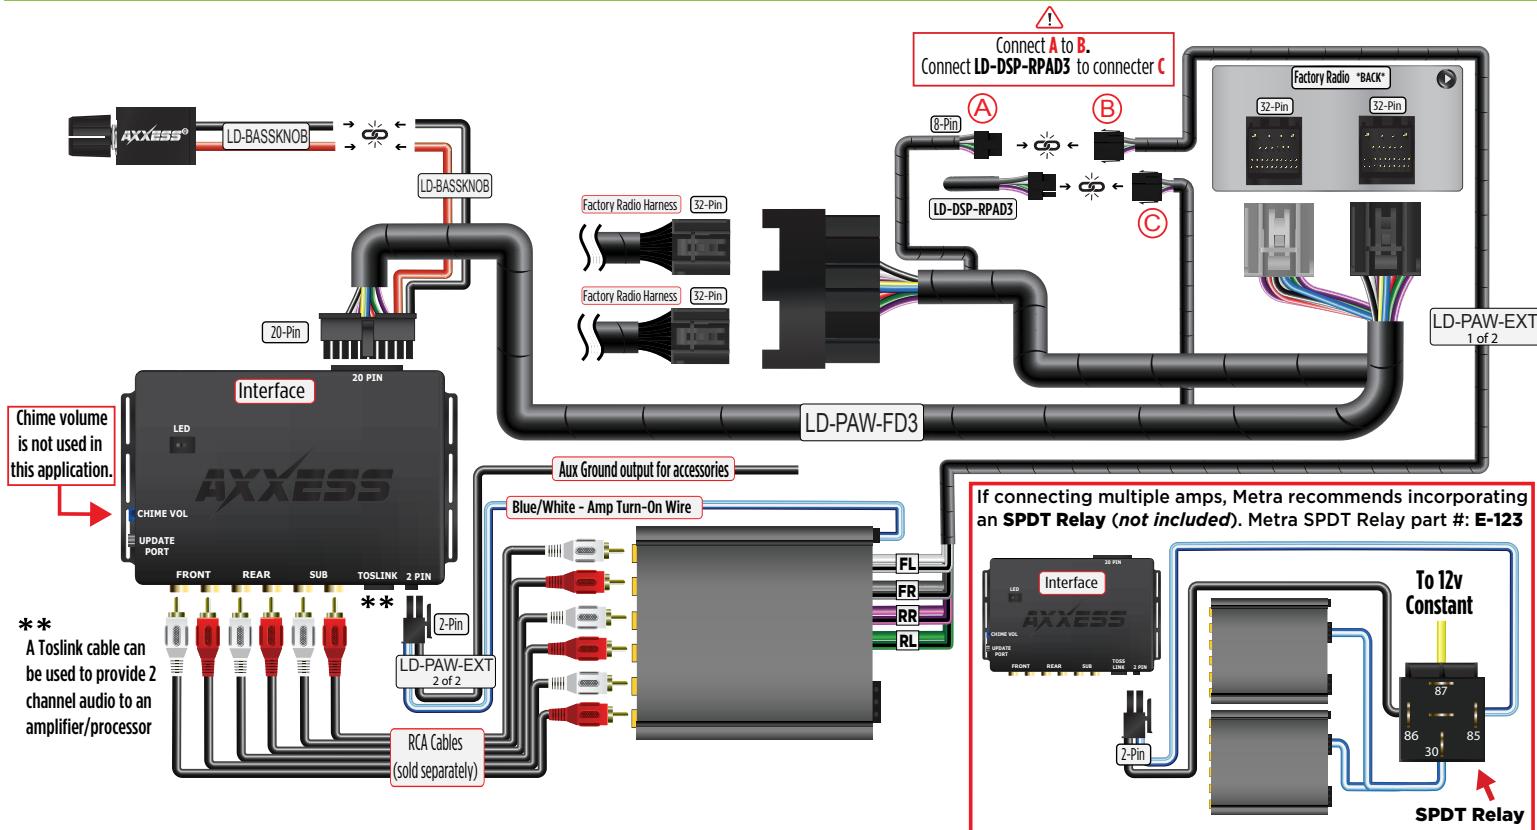

TROUBLESHOOTING

Final LED Feedback

At the end of programming the LED will turn **Solid Green** which indicates programming was successful. If the LED didn't turn **Solid Green**, reference the list below to understand which programming section the problem may stem from.

Feedback Light	Condition/Status
Solid Green	All Good
Solid Red	Missing Can Frames
Blink Red	Clipping Output
Green/Red	Missing Adv. (Comm Frames)

Scan QR Code



Further troubleshooting steps and information can be located at:

<https://axxessinterfaces.com/product/AXAMP-FD3>

Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



Metra recommends MECP certified technicians