



Fits Honda Ridgeline (without factory NAV) **2006-2014**

Visit MetraOnline.com for more detailed information about the product and up-to-date vehicle specific applications

KIT FEATURES

- Stereo installation kit designed to fit any standard 2" tall aftermarket radio utilizing our patented quick-release, snap-in ISO mount system with custom trim ring
- Painted dark charcoal gray
- Made from the highest quality ABS plastic for an original factory-like fit and finish
- Use 95-7884B for vehicles equipped with factory navigation

KIT COMPONENTS

- A) Radio housing • B) Radio brackets • C) Pocket brackets • D) Trim plate • E) Carriage bolts (2) • F) Keps nuts (2)

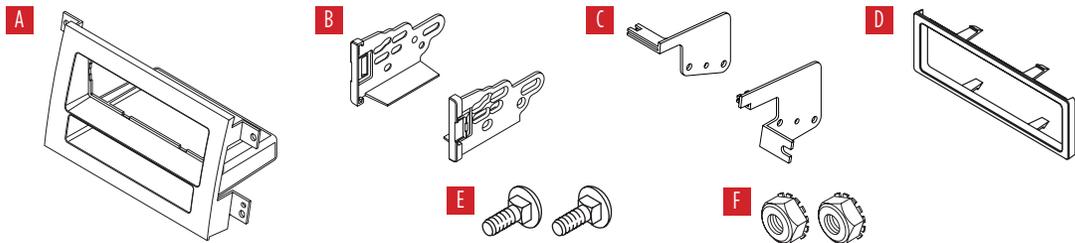


TABLE OF CONTENTS

Dash Disassembly	2
Kit Preparation.....	2
Kit Assembly	
- DIN radio provision with pocket	3
- ISO DIN radio provision with pocket	3

WIRING & ANTENNA CONNECTIONS (sold separately)

- Wiring Harness: 70-1721 — 1998-2008
 • 70-1729 — 2009-2014
- Antenna Adapter: 40-HD10

TOOLS REQUIRED


- Small flat blade screwdriver
- Phillips screwdriver

Attention! With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.


DASH DISASSEMBLY

1. Unclip and remove entire panel surrounding radio and a/c control all the way over to left side of steering wheel. (Figure A)
2. Remove (5) Phillips screws securing the radio and pocket assembly. (Figure B)
3. Remove (2) Phillips screws (1 per side) securing factory pocket to radio/pocket bracket assembly. (Figure C, D)


Continue to Kit Preparation

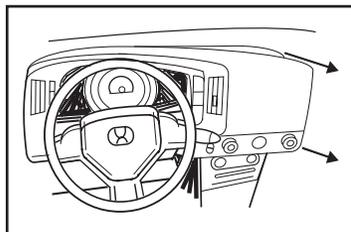


(Figure A)

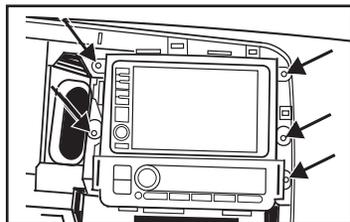

(Figure B)

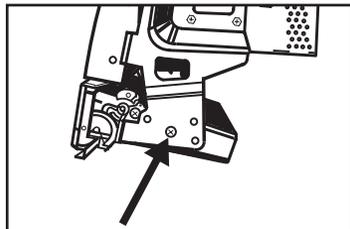

(Figure C)

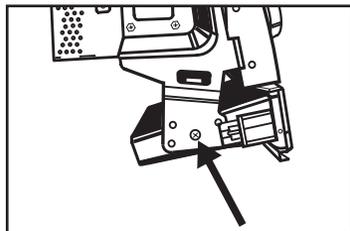


(Figure D)


KIT PREPARATION

1. Attach the **radio housing brackets** to the **radio housing** using the included carriage bolts and Keps nuts. (Figure A)
2. Position the factory pocket into the assembled radio housing assembly and secure with the factory hardware. (Figure B)

Continue to Kit Assembly

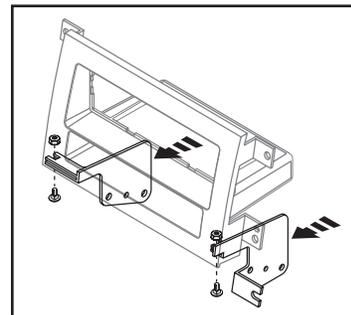

(Figure A)

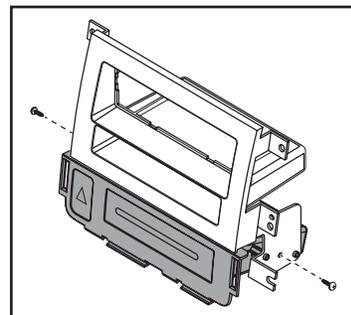


(Figure B)


KIT ASSEMBLY

DIN radio provision with pocket

1. Slide the DIN cage into the radio housing assembly and secure by bending the metal locking tabs down. (Figure A)
2. Slide the aftermarket radio into the cage and secure. (Figure B)
3. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
4. Mount the new radio assembly into the dash and reassemble the dash in reverse order of disassembly.

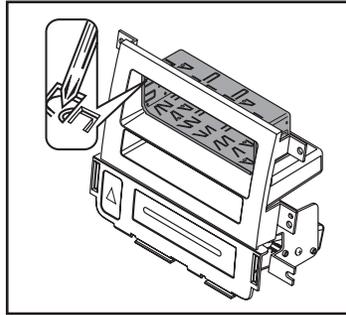


(Figure A)

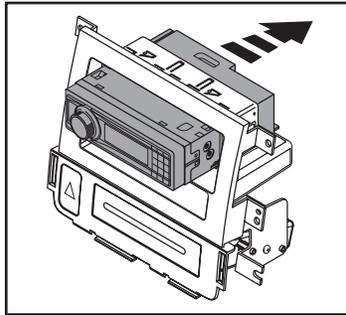


(Figure B)

ISO DIN radio provision with pocket

1. Remove the metal “DIN” sleeve and plastic trim ring from the aftermarket radio. (Figure A)
2. Mount the **ISO brackets** to the radio with the screws supplied with the radio. (Figure A)
3. Slide the radio into the radio opening until the side clips engage. (Figure B)
4. Snap the **trim plate** into the **radio housing**. (Figure B)
5. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
6. Mount the new radio assembly into the dash and reassemble the dash in reverse order of disassembly.

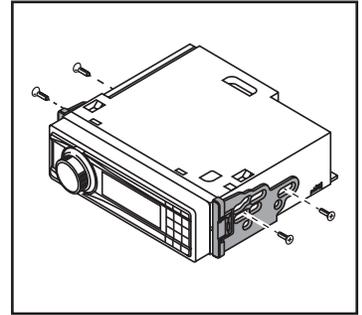

(Figure A)

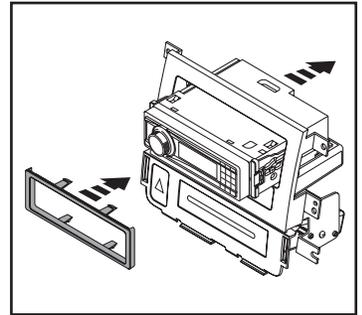

(Figure B)



99-7870G
INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



**Metra recommends MECP
certified technicians**