

Fairing Disassembly

**Harley Davidson Street Glide,
Electra Glide, Ultra, and
Limited models 2014-2023.5**

1. Remove (4) T-27 from inner fairing. (Figure A)
2. Remove (3) T-27 from windshield (caution not to drop the outer fairing or windshield). (Figure B)
3. Remove outer fairing, unplugging the headlight. (Figure C)
4. Remove (2) T-27 to remove the fairing vent and remove the vent. (Figure D)

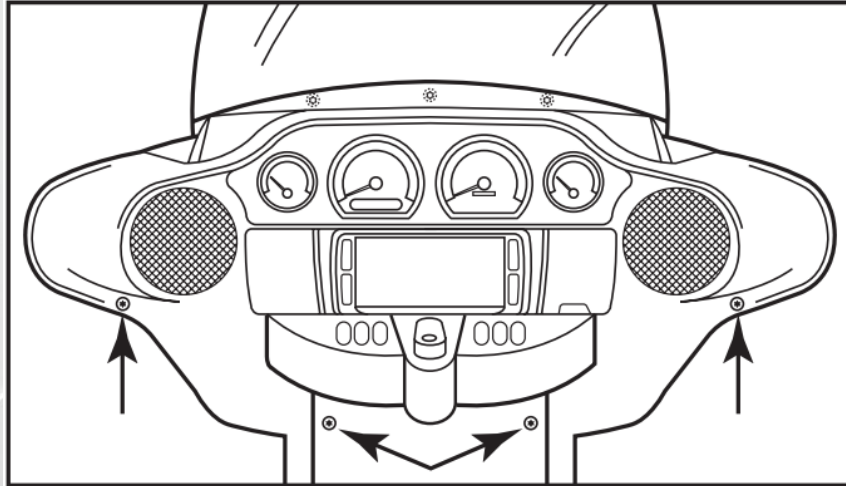


Figure A

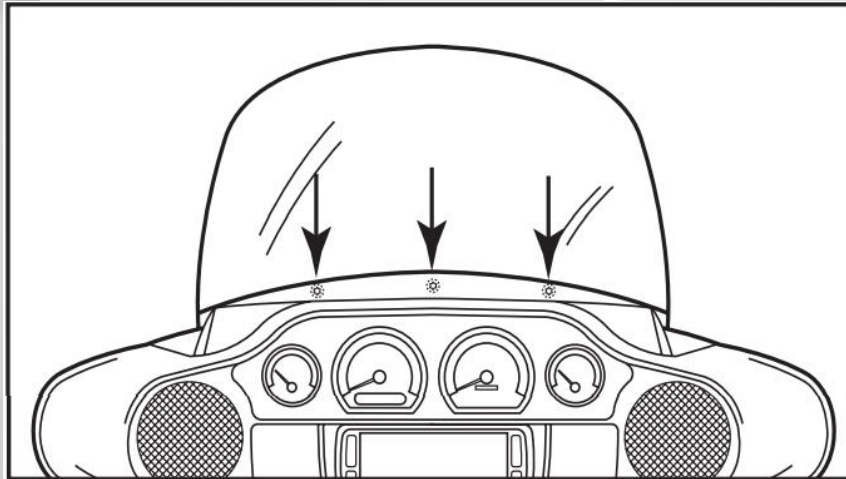


Figure B

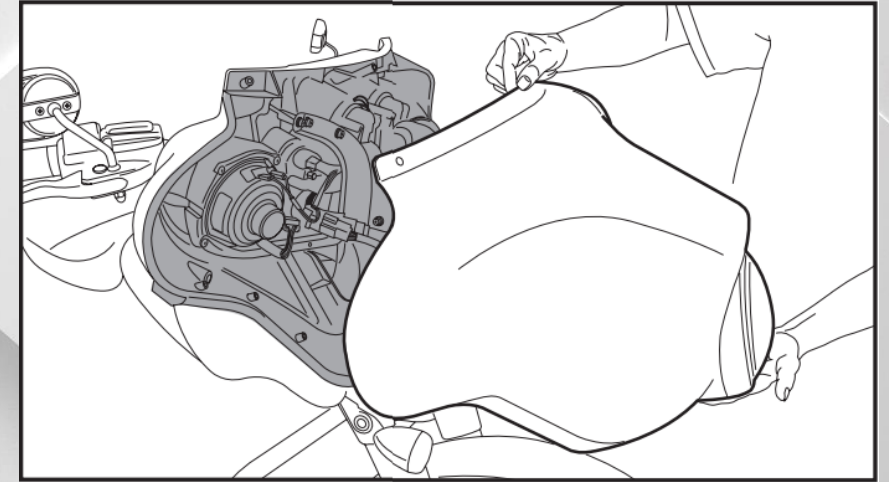


Figure C

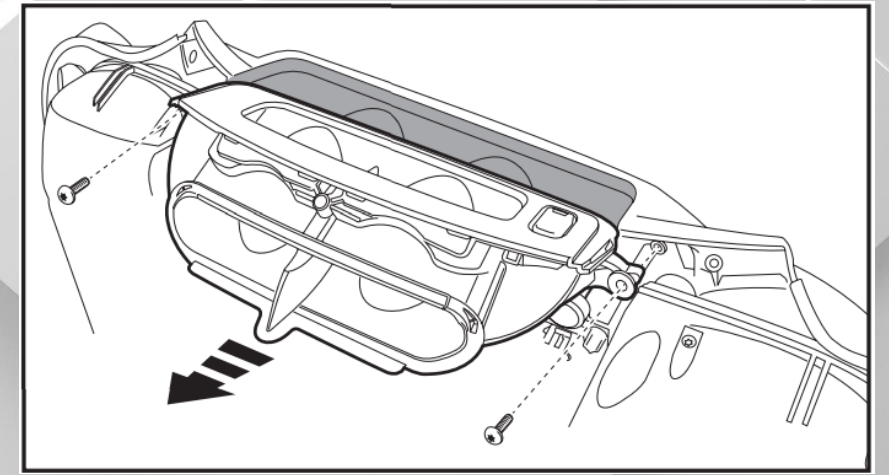


Figure D

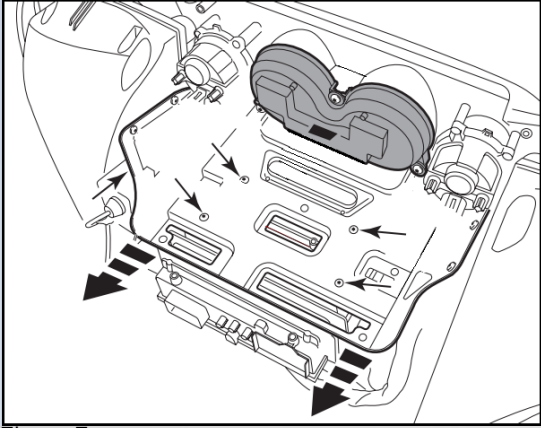


Figure E



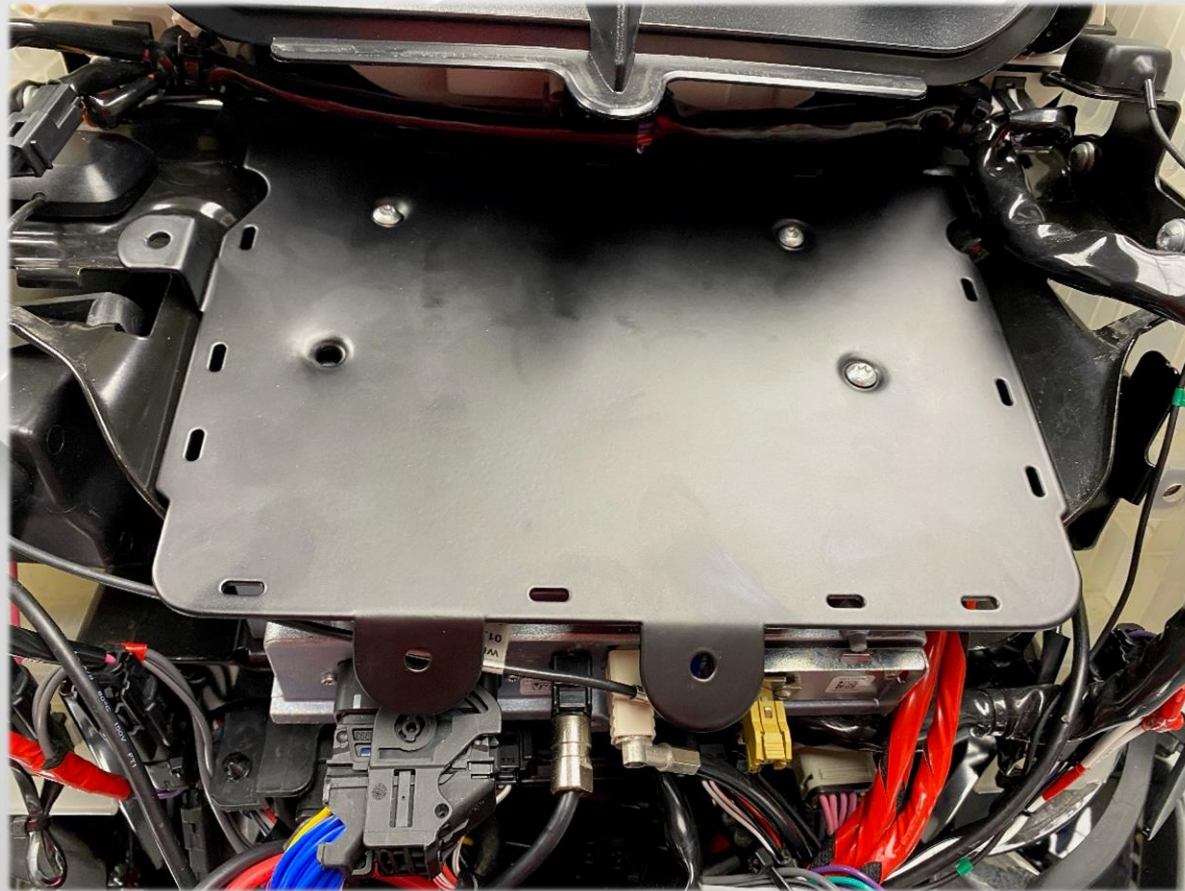


Figure F

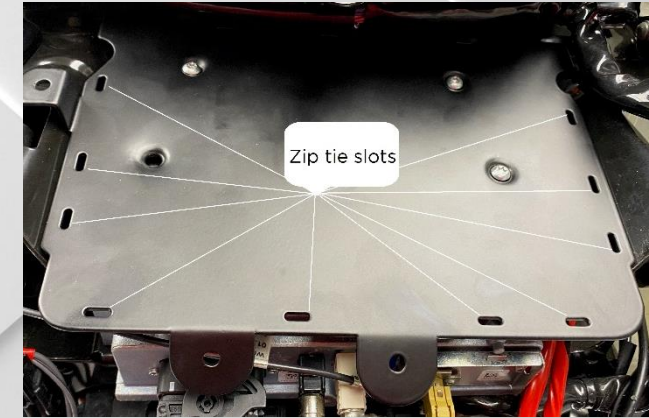

Kit features:

- 12 Black zip ties
- 8.5"x6" Hook and loop tape

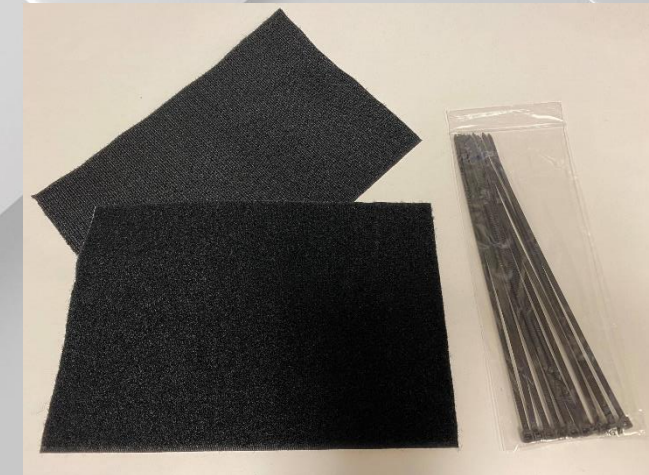

Installing: BC-AMP06 Bracket

1. Remove the four (4) upper Bolt from the Radio support Bracket, using a T25 Torx bit. (Figure E)
2. Place the BC-AMP06 mount in radio cradle. (Figure F)
(Caution, Do not over torque Fasteners. Factory spec is 20 In. Lbs.)
3. Reassemble the fairing in reverse order of disassembly, on page 1.