



Fits Jeep Grand Cherokee 2014-2021

Visit MetraOnline.com for more detailed information about the product and up-to-date vehicle specific applications

KIT FEATURES

- DDIN radio provision
- ISO DIN radio provision with pocket sold separately (part #88-00-9004)
- Designed to accommodate the factory climate controls - A separate interface is required for retaining select climate and comfort features.
- Includes parts for both small and large screen models
- Painted scratch-resistant matte black with two included trim options (silver and bronze) for a factory-like appearance

KIT COMPONENTS

- A) Outer trim panels (2) (1 bronze and 1 silver)
- B) Radio trim panel
- C) Small screen climate trim
- D) Small screen back cover
- E) Large screen climate trim
- F) Large screen back cover
- G) Radio brackets
- H) Panel clips (10)
- I) Phillips screws (14)

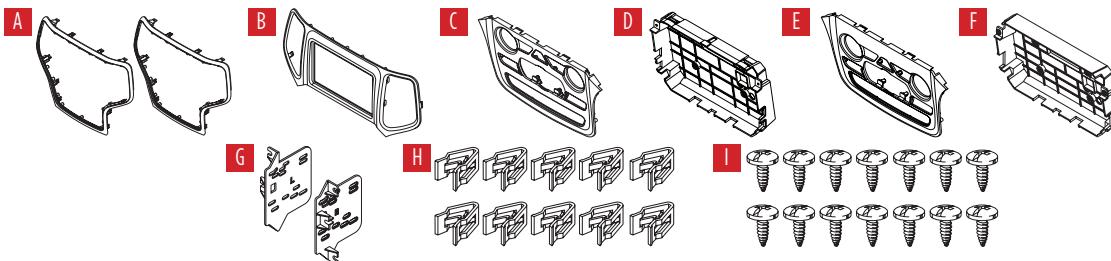


TABLE OF CONTENTS

Dash Disassembly.....	2
Kit Preparation.....	3-6
Kit Assembly	7

WIRING & ANTENNA CONNECTIONS

Wiring Harness: See axxessinterface.com for A/V and SWC interface options.
Antenna Adapter: 40-EU55

TOOLS REQUIRED


- Panel removal tool
- Phillips screwdriver
- Socket wrench

Attention! with the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.


DASH DISASSEMBLY

1. Using the panel removal tool, gently unclip, unplug, and remove the climate control panel. (Figure A)
2. Remove (4) 9/32" screws securing the radio/display screen, and then unplug and remove. (Figure B)
3. Remove (3) 5.5mm screws securing the black control module in the sub-dash, and then relocate lower to allow clearance for the aftermarket radio. (Figure C)


Continue to Kit Preparation

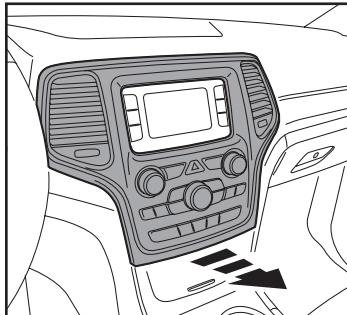

(Figure A)

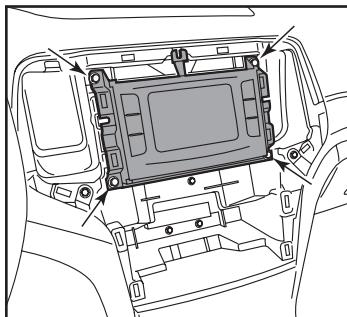

(Figure B)

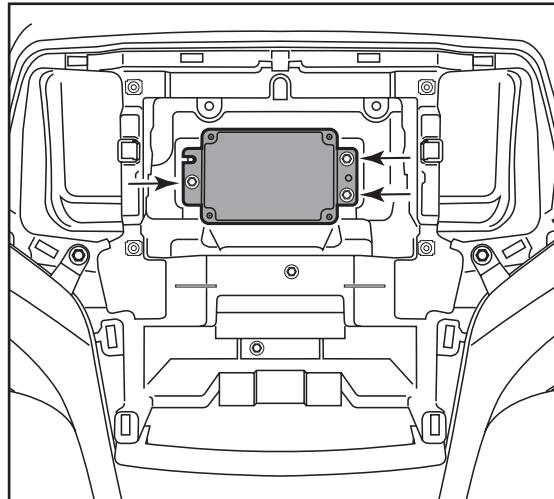


(Figure C)


KIT PREPARATION

From the factory radio/climate control panel:

1. Unclip the A/C vents from the back of the panel. (Figure A)
2. Pull the three knobs from the front of the factory climate controls. They come apart in three pieces. An outer ring, a button and a rubber keypad or two. (Figure B)

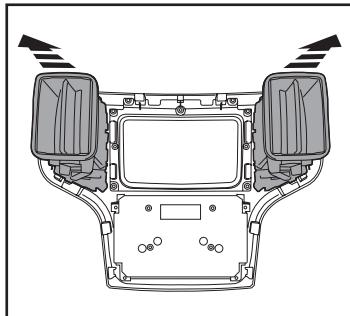


(Figure A)

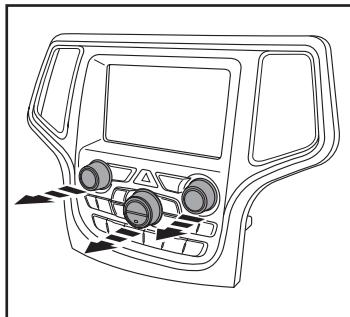


(Figure B)

3. Remove (8) T-8 torx screws from the back cover. (Figure C)
4. Unclip and flip up the larger circuit board to expose and remove (6) Torx T-8 screws. (Figure D)

Continued on the next page

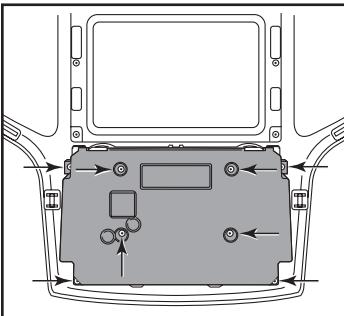

(Figure C)

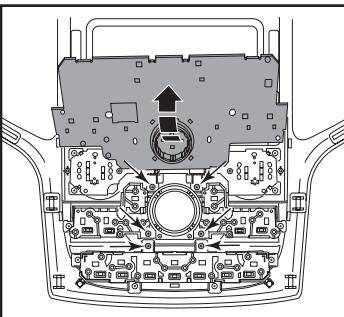


(Figure D)

KIT PREPARATION (CONT.)

From the factory radio/climate control panel: (cont.)

5. Remove 10 T-8 Torx screws from the outer edges of the circuit boards. (Figure E)
6. Remove the circuit boards, rubber keypads, and button assemblies.

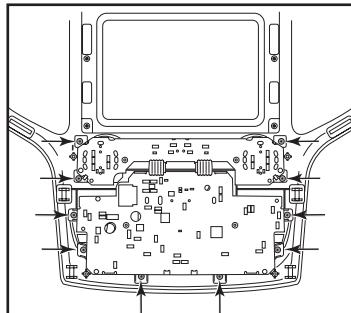


(Figure E)


Assembling the kit:

7. Pick the appropriate **climate panel** (large screen or small screen) and snap it to the **radio trim panel**. (Figure F)
8. Select the appropriate color **outer trim panel** and secure it using the 14 included screws. (Figure G)

Continued on the next page

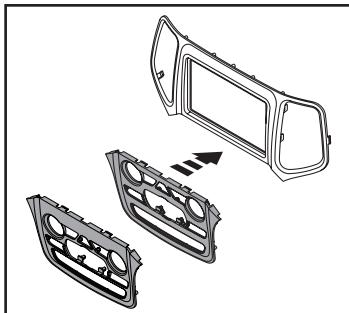

(Figure F)

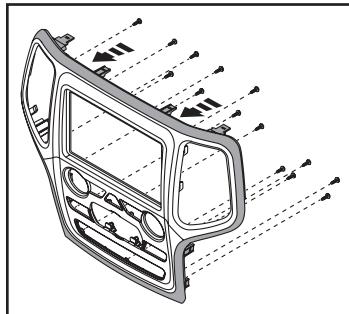


(Figure G)

KIT PREPARATION (CONT.)


To the radio trim panel:

Place the circuit boards, rubber keypads, and button assemblies into the **radio trim panel** in the following sequence, using the factory hardware.

1. Place center circuit board into the **radio trim panel**. (Figure A)
2. Place the top circuit board into the **radio trim panel**. With the larger circuit board flipped up, secure the (4) middle T-8 screws in the center. (Figure B)

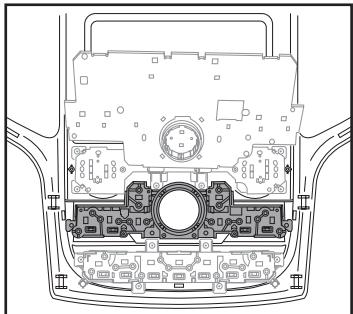


(Figure A)

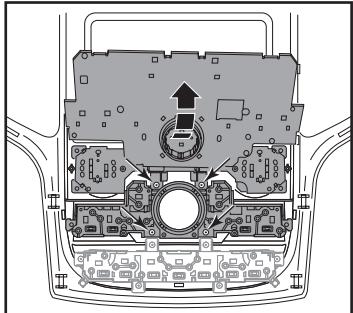


(Figure B)

3. Place the lower circuit board into the **radio trim panel**. Secure the (2) T-8 screws at the top of the circuit board (Figure C)
4. Rotate the larger circuit board down and clip into position, secure the (10) T-8 screws on the outer edges of the three circuit boards. (Figure D)

Continued on the next page

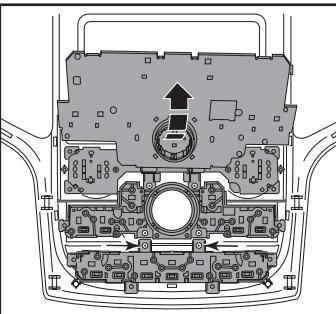

(Figure C)

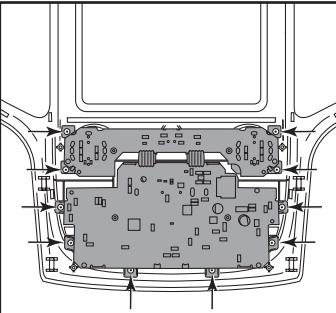


(Figure D)

KIT PREPARATION (CONT.)


To the radio trim panel: (cont.)

5. Select the appropriate **back cover** and secure using 6 factory screws (Figure E)
6. Install the three knobs to the front of the factory climate controls. (Figure E)
7. Snap the vents into the **radio trim panel** assembly. (Figure F)
8. Install the **panel clips** (10) the **radio trim panel** assembly.

Continue to Kit Assembly

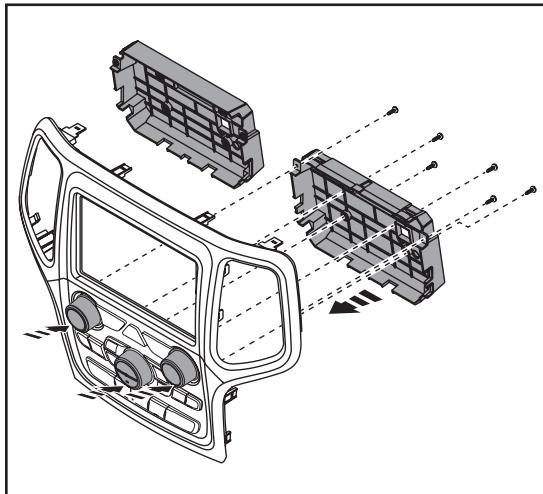


(Figure E)

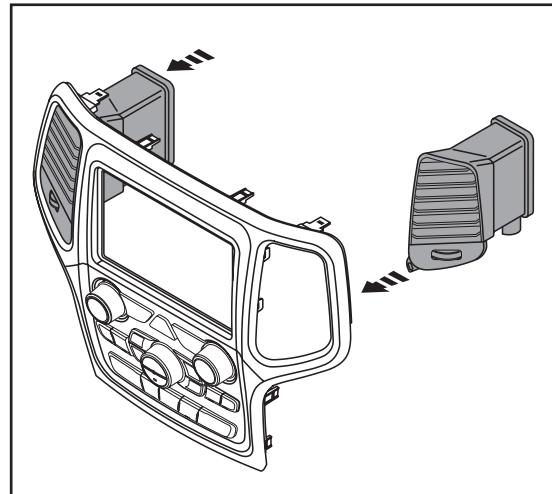

(Figure F)

KIT ASSEMBLY

1. Attach the **radio brackets** to the radio using the screws supplied with the radio. (Figure A)
2. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXXESS. Re-connect the negative battery terminal and test the radio for proper operation.
3. Slide the radio into the completed assembly, and then secure it to the assembly using the factory screws.
4. Reassemble the dash in reverse order of disassembly.

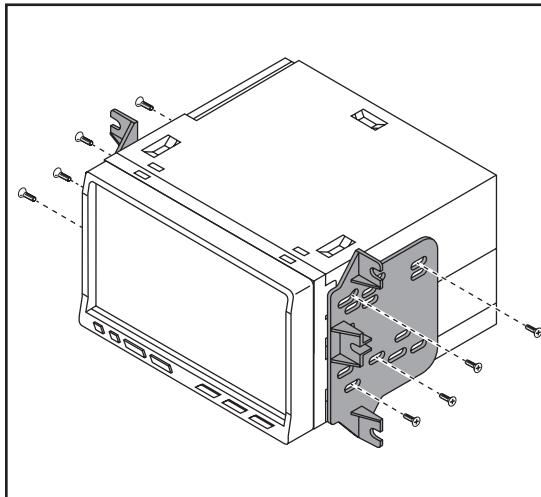

(Figure A)



95-6562

INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



**Metra recommends MECP
certified technicians**